

## SSG5000 Series Upgrade Instruction

**Note: During the updating, do not cut off the power or pull out the U-disk.**

1. Please firstly copy the update file (.ADS) to a U-disk.
2. Insert the U-disk.
3. Press **UTILITY** button and get into the utility menu.

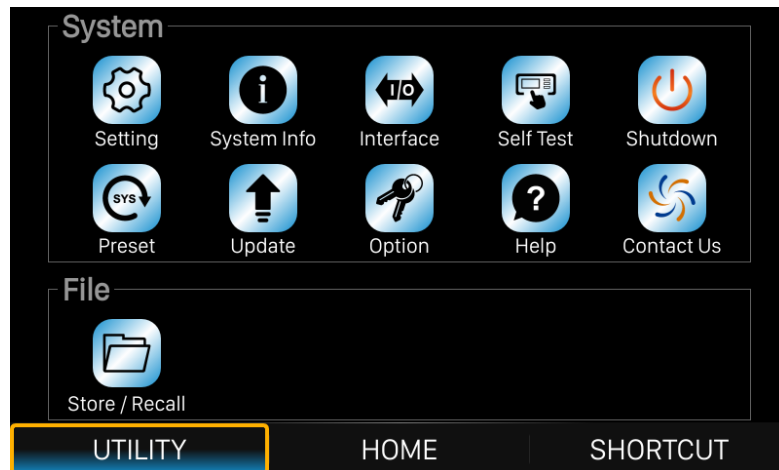


Figure 1 UTILITY function menu

4. Press **Update** and then enter the file system (or you can press **Store/Recall** button to enter the file system).

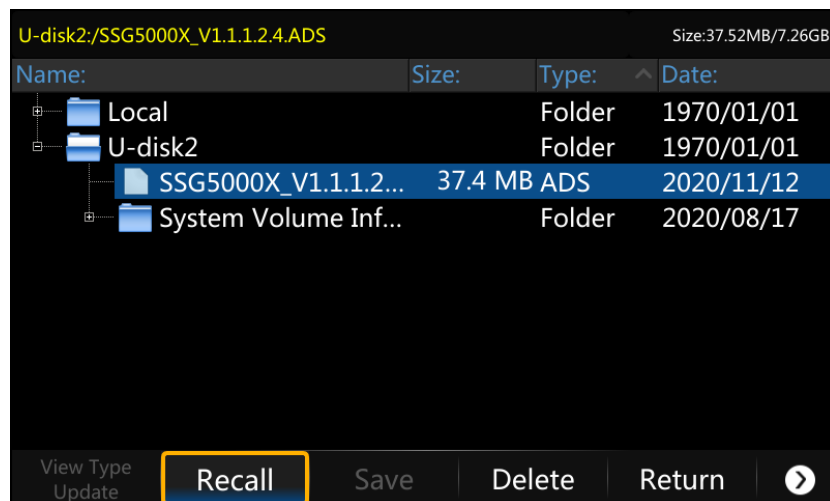


Figure 2 File system

5. Select the update firmware which should be with an ADS postfix. Press **Recall** to start the update. A progress bar is displayed during the update. After the update is completed, the generator will restart automatically.
6. After the signal generator restarted, we can check the version information in System Info.