

Revision History

Date	Version	Revi	vision		
5/6/2019	6.01.01.33R2	1.	Removed the warning message when parameter is set to		
			a value beyond the limit		
		2.	Supported to copy/paste/delete folder in Store/Recall		
			file manager		
		3.	Optimized initialization time when the waveform is		
			switched between IQ and other waveforms		
		4.	Supported phase compensation in IQ mode		
		5.	Fixed several bugs:		
			a) [2018/09/14-924144, 2018/09/14-937446] Signals		
			get interrupted upon timing-related change of the		
			settings in Independent mode		
			b) Anomaly on square/pulse waveform with some		
			setting		
			c) [2018/11/06-92208] Anomaly on arb waveform		
			when toggle the "ArbMode" from DDS to TrueArb		
7/20/2010	6 01 01 20010	1	and back to DDS in Independent mode		
7/20/2018	6.01.01.29R10	1.	Optimized TrueArb algorithm and added 3 types of internelation: sinc sinc 27 and sinc 12		
		2.	interpolation: sinc, sinc27 and sinc13 Optimized jitter performance of Square and Pulse		
		2. 3.	Optimized algorithm of Noise generating so the		
		5.	bandwidth setting lower limit of Noise optimized from		
			80 MHz to 1 mHz		
		4.	[2017/12/22-174663] Changed the clock switch strategy:		
			When the clock source is set to External and no actual		
			external clock signal is being received, the clock source		
			will not switch to Internal automatically but the clock		
			0		
			icon 🗳 will indicate that external clock is lost		
		5.	[2017/12/22-174663] Changed default state of 10 MHz		
			Out to "Disable"		
		6.	Added Slave Delay option in Multi-Device		
			Synchronization function		
		7.	Added indicator for double function of the soft keys		
			Offset > Offset		
			LowLevel => LowLevel		
		8.	Fixed the following bugs:		
			a) Crashes when downloading 20 Mpts waveform data		
			from the EasyWave program		
			b) Inaccurate burst delay		
			c) In TrueArb mode enabling AM with large amplitude		



SDG6000X Firmware Revision History and Update Instructions

Date	Version	Revision
		may trigger OVP
		d) Switching the waveform from IQ to sine with large
		amplitude may trigger OVP
		e) Switching off the output on the SDG6kX only drops
		the output level by approx 20 dB but does not
		completely switch it off
11/10/2017	6.01.01.28R1	The first formal release



Compatibility between Versions

Source Version	Object Version	Compatibility
6.01.01.29R10	6.01.01.33R2	Tested
6.01.01.28R1	6.01.01.33R2	Tested



Update Instructions

WARNING: DO NOT shut off the instrument until the update is completed.

1. Copy the update file (*.ads) to a FLASH type U-disk, and then connect the U-disk to the USB host port of the instrument.



2. Press the Utility key on the front panel, and then softkey "System ->Page 1/2 -> Firmware Update", to enter the interface of the file browser.

Addr(C) /Local					
SB Device (0:)	5.0GB / 29.3G				
🗢 Local(C:)			160B / 82.8M		
File Type	Browse	Recall	Delete	Page	
Data	210100	r to bull	2 01010	1/2 🕨	

3. Select " USB Device" thru the knob on the front panel, press "Browse", and then select the correct ads file using the knob



Addr(O) II /device/sda6000x						
🗢 Local(C:)	160B / 82.8M					
S∎USB Device (0:)	4.10GB / 29.3G					
🖰 <up></up>	🛀 <up></up>					
💳 sdg6000x						
V600R001B01	18.7MB					
Ella Tama				Dawa		
File Type	Browse	Recall	Delete	Page		
Data				1/2 🕨		

4. Press "Recall" to start the update. A progress bar is displayed during the update. After the update is completed, the generator will restart automatically.

WARNING: DO NOT shut off the instrument until the update is completed.