


## Adjusting measurement font size with the SDS2000X series

December 22, 2017

You can increase the font size used for the measurement functions of the SDS2000X series.


To activate this function:

- Press Utility > Do Self Cal (Page 1/3). This will bring up the Self Cal warning:

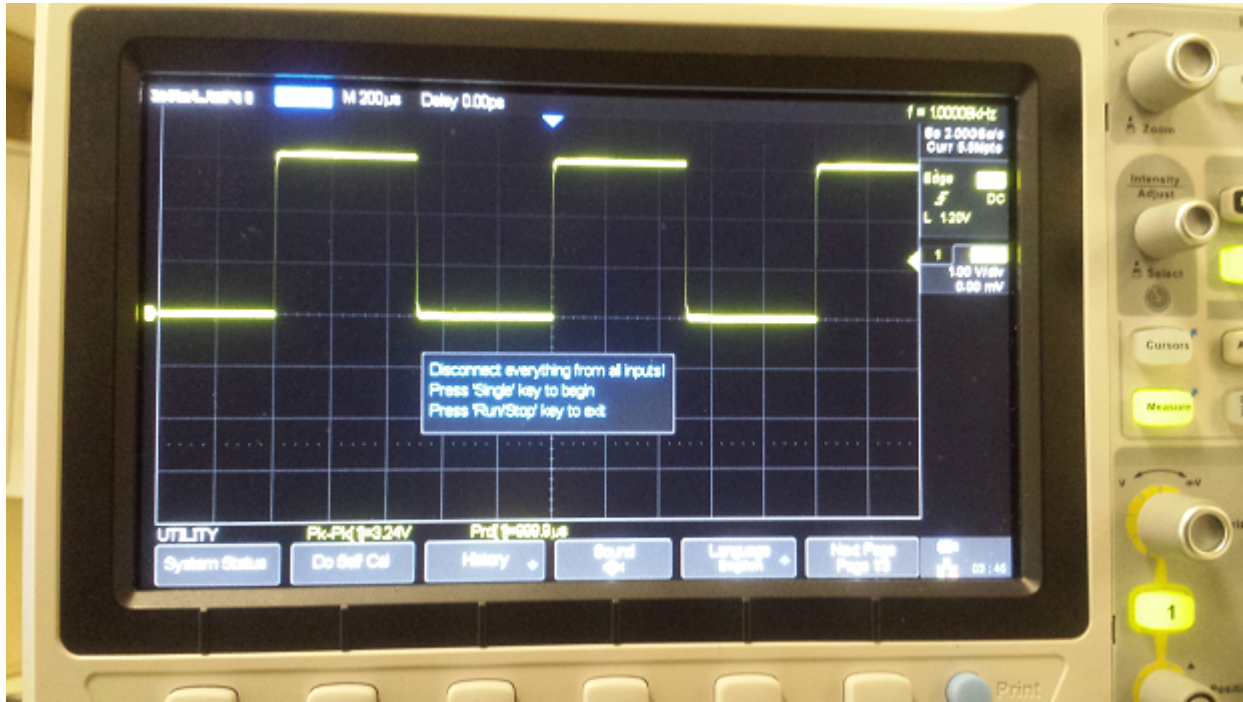


- From the warning page, press Cursors 1 time > Measure 1 time > Display/Persist two times > Measure 1 time > Cursors 1 time

This will increase the font size, as shown:

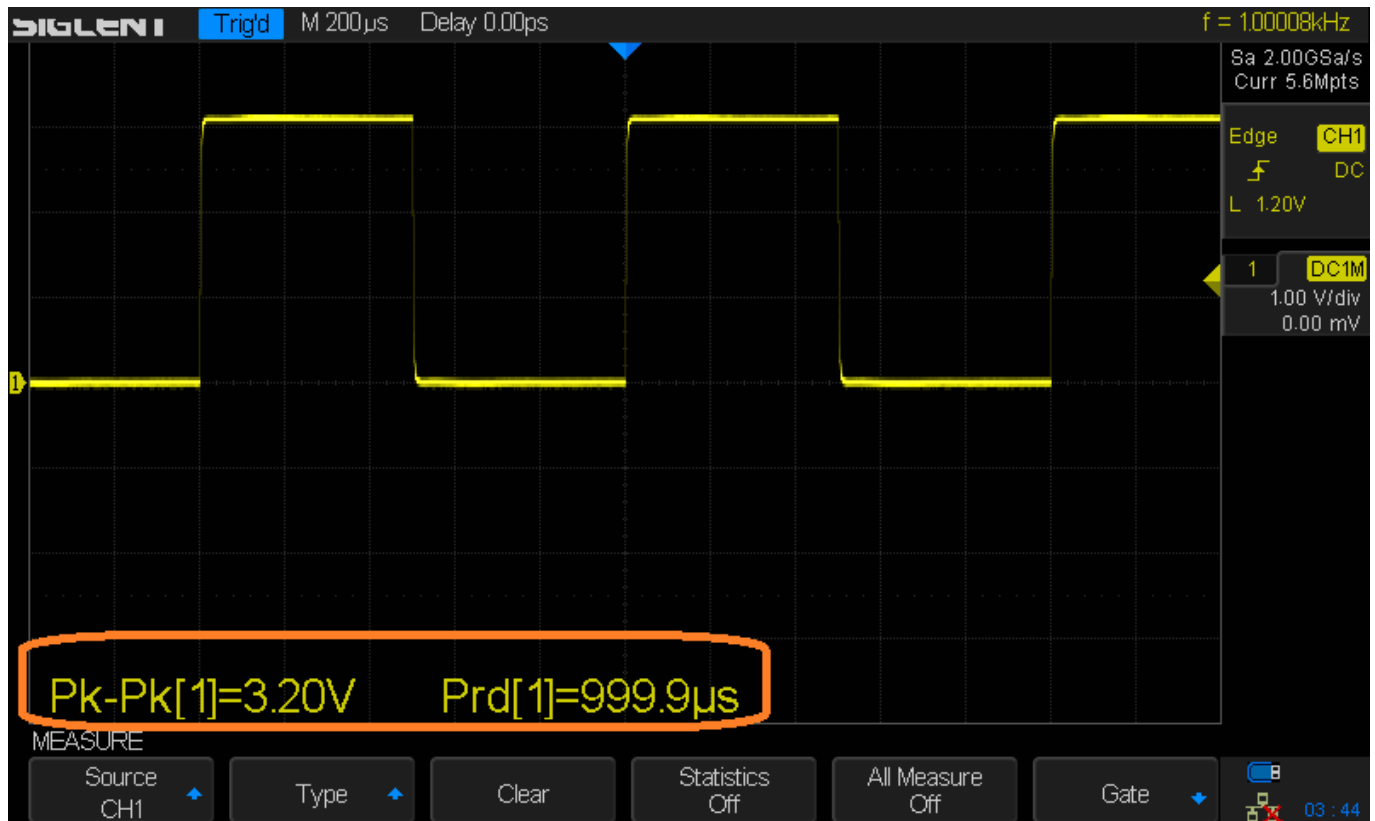

To go back to defaults:

- Press Utility > Do Self Cal (Page 1/3). This will bring of the Self Cal warning.
- From the warning page, press Display/Persist 1 time > Measure 1 time > Cursors two times > Measure 1 time > Display/Persist 1 time

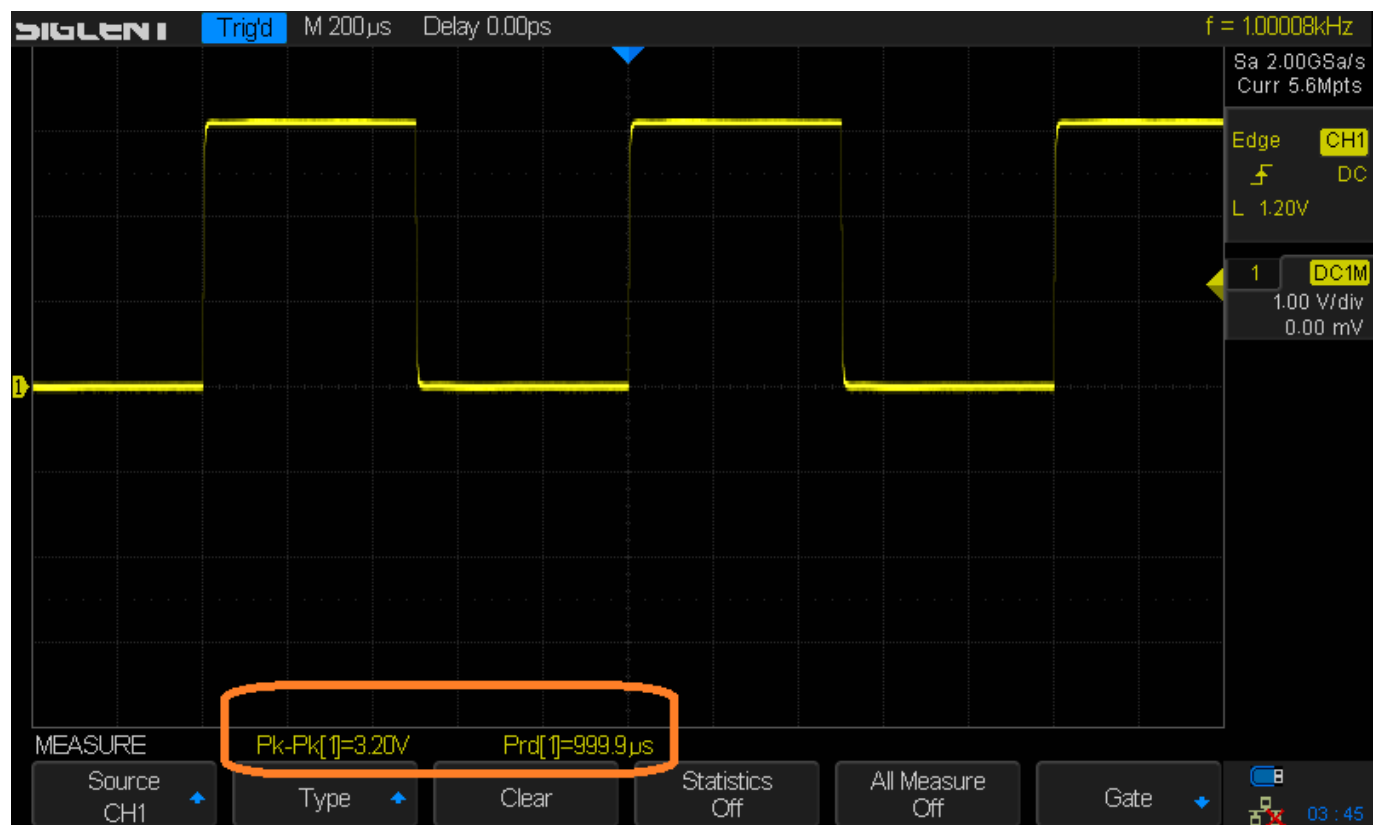



### **North American Headquarters**

SIGLENT Technologies America, Inc  
6557 Cochran Rd Solon, Ohio 44139  
Tel: 440-398-5800  
Toll Free: 877-515-5551  
Fax: 440-399-1211  
[info@siglent.com](mailto:info@siglent.com)  
[www.siglentamerica.com/](http://www.siglentamerica.com/)

### **European Sales Offices**

SIGLENT TECHNOLOGIES EUROPE GmbH  
Staetzlinger Str. 70  
86165 Augsburg, Germany  
Tel: +49(0)-821-666 0 111 0  
Fax: +49(0)-821-666 0 111 22  
[info-eu@siglent.com](mailto:info-eu@siglent.com)  
[www.siglenteu.com](http://www.siglenteu.com)

### **Asian Headquarters**

SIGLENT TECHNOLOGIES CO., LTD.  
Blog No.4 & No.5, Antongda Industrial Zone,  
3rd Liuxian Road, Bao'an District,  
Shenzhen, 518101, China.  
Tel: + 86 755 3661 5186  
Fax: + 86 755 3359 1582  
[sales@siglent.com](mailto:sales@siglent.com)  
[www.siglent.com/ens](http://www.siglent.com/ens)