

# Getting Started with EasySpectrum Software

October 23, 2017

EasySpectrum software provides a remote control interface for SIGLENT SSA3000 Series of spectrum analyzers that can be used to ease data collection, remote monitoring, and pre-compliance test sequencing.

The software consists of two basic control modes:

## Monitor

A virtual front panel mode that enables users to see the spectral traces in real time as well as control the instruments basic settings like start/stop frequency and resolution bandwidth.

This mode is ideal for remote monitoring transmitters, site surveys of interference sources, and collection of multiple data sets.

## EMI

Provides test sequence creation, correction tables, limit line editing, peak detection controls, and final scan results reporting.


This mode is useful for pre-compliance and electromagnetic interference testing.

## INITIAL SETUP


- SSA3000X Series spectrum analyzer
- Download the latest VISA Runtime Engine that is compatible with your computer operating system.

It can be downloaded from National Instruments: <http://bit.ly/2pw5gQW>

- Download EasySpectrum Software from the SSA3000X Product Page on the SIGLENT America website: <http://bit.ly/2okc8wG>
- Compatible computer running Win7 through Win10
- LAN or USB connection to SSA3000X
- Power on analyzer and connect the instrument to the computer using the USB or LAN cable. Note that the USB and LAN communication ports are located on the back panel of the analyzer. In this example, we will use the USB connection.
- Start EasySpectrum by double-clicking on the EasySpectrum icon on the desktop or by running it from the start menu

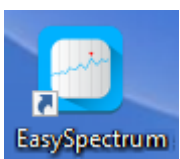


- If the connection is successful, you should see the instrument address appear under the Devices and Interfaces heading as shown below:

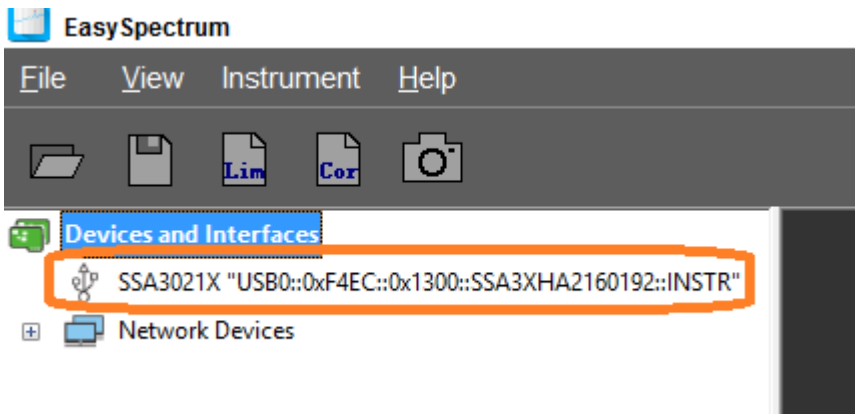


## MONITOR MODE

The monitor mode is designed to ease remote observation and spectral data collection from broadcast, transmitters, and interference sources.


1. To begin, right-click on the instrument you wish to control under the Devices and Interfaces entry and select Perform Monitor:

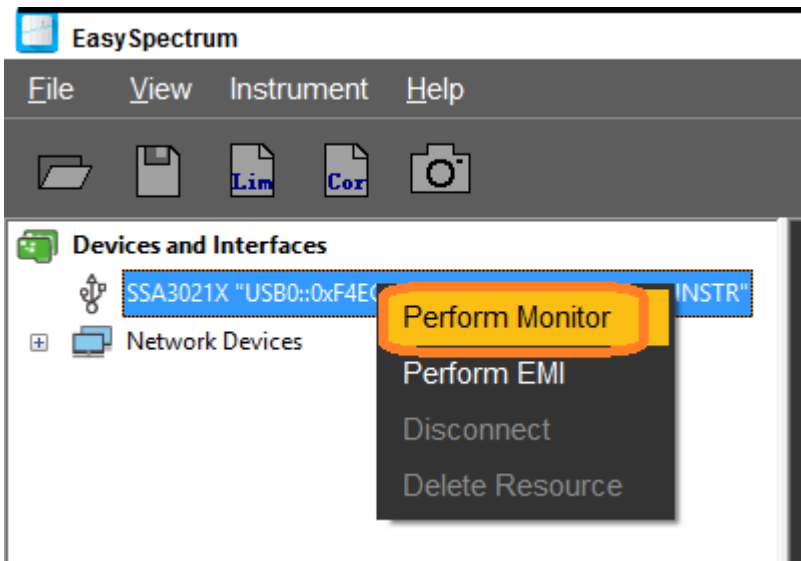

2. This will open the monitor window, as shown below:

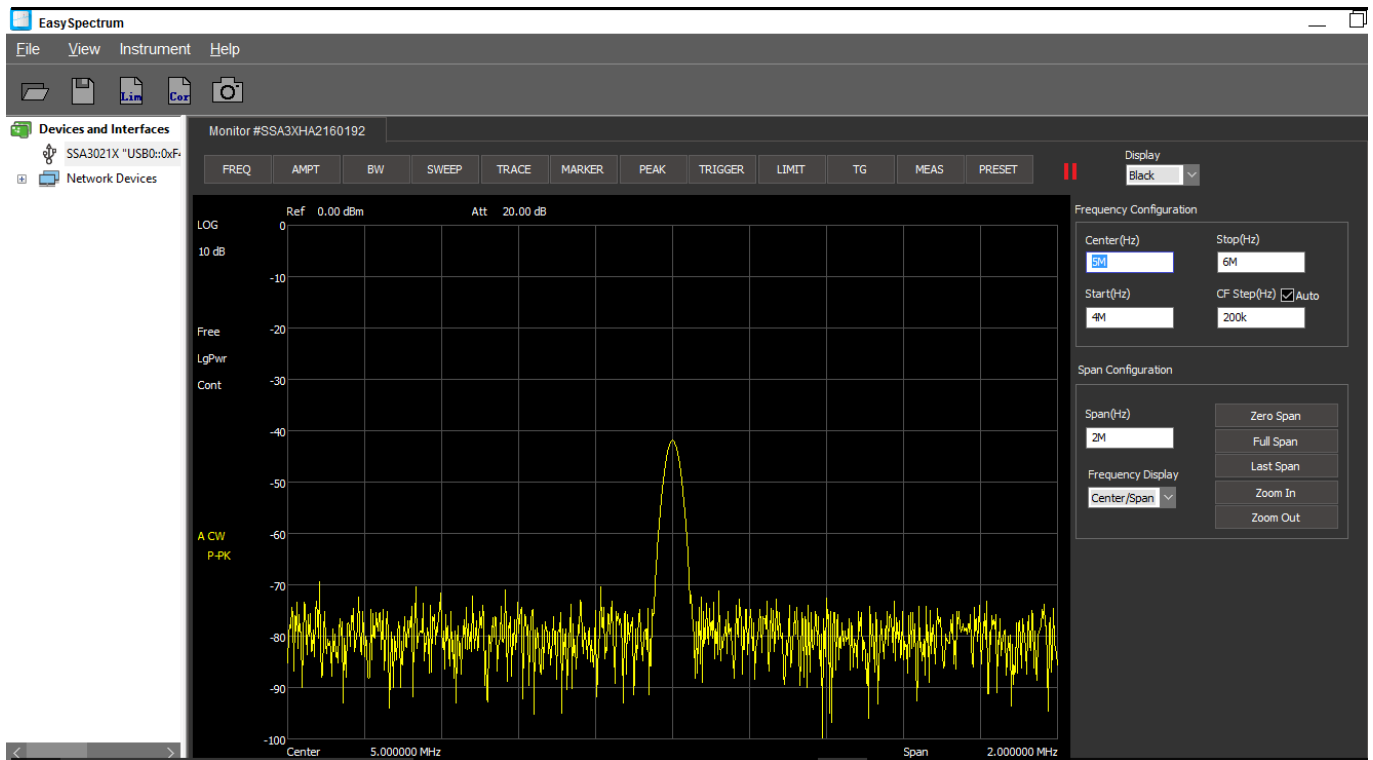

3. The menu bar along the top contains controls that can alter the settings on the instrument. Here is a brief summary of each:

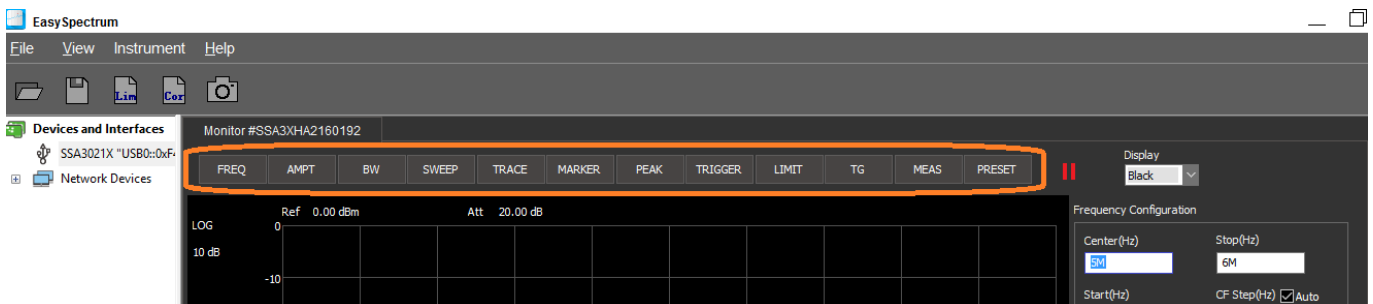

**FREQ:** Set the start, stop, center and other frequency and span parameters

**AMPT:** Set the analyzer amplitude parameters, including the pre-amplifier, attenuation, vertical measurement scale, and correction settings

**BW:** Set the Resolution Bandwidth (RBW), Video Bandwidth (VBW), and filter settings. Smaller bandwidths increase frequency resolution and decrease the noise floor, but increase sweep time

**SWEEP:** Set the sweep time, single/continuous, and the sweep rule

**TRACE:** Enable/disable traces, set trace type, detector type, and trace math

**MARKER:** Select marker number, type, and position

**PEAK:** Set peak type, threshold, and excursion as well as enable/disable peak table

**TRIGGER:** Set the trigger mode and trigger level for externally triggered sweeps


**LIMIT:** Enable/Disable limit lines, create/edit limit line segments/points, and enable/disable limit testing

**TG (OPTIONAL LICENSE):** Enable/Disable the tracking generator output, set output amplitude, and normalization of the set trace (Part Number TG-SSA3000X)


**MEAS (OPTIONAL):** Enable/Disable on screen measurements, including Channel Power, ACPR, Occupied BW, T-Power, TOI, and Spectrum Monitor. (Part Number AMK-SSA3000X)


**PRESET:** Recall the instrument configuration that is currently mapped to the Preset key on the instrument front panel

4. Run/Pause to start/stop trace updating:

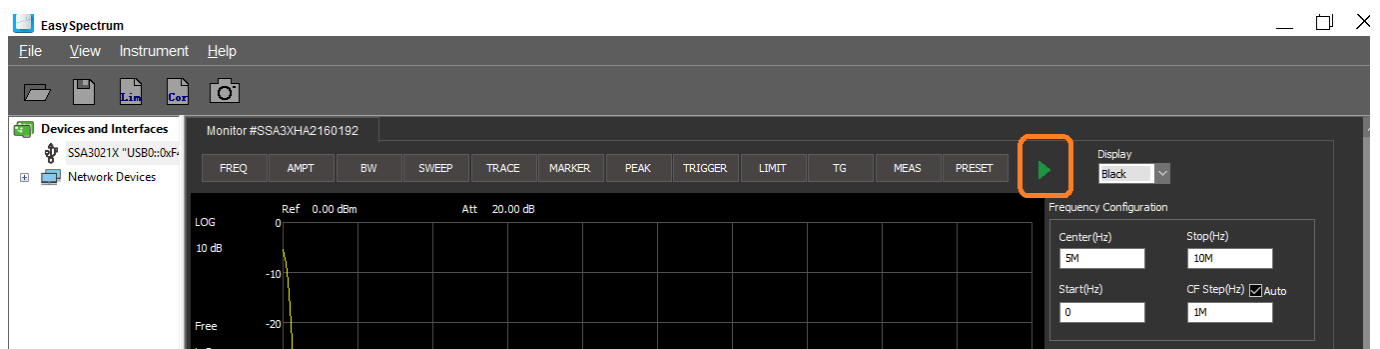


5. Set the display color using the Display setting:

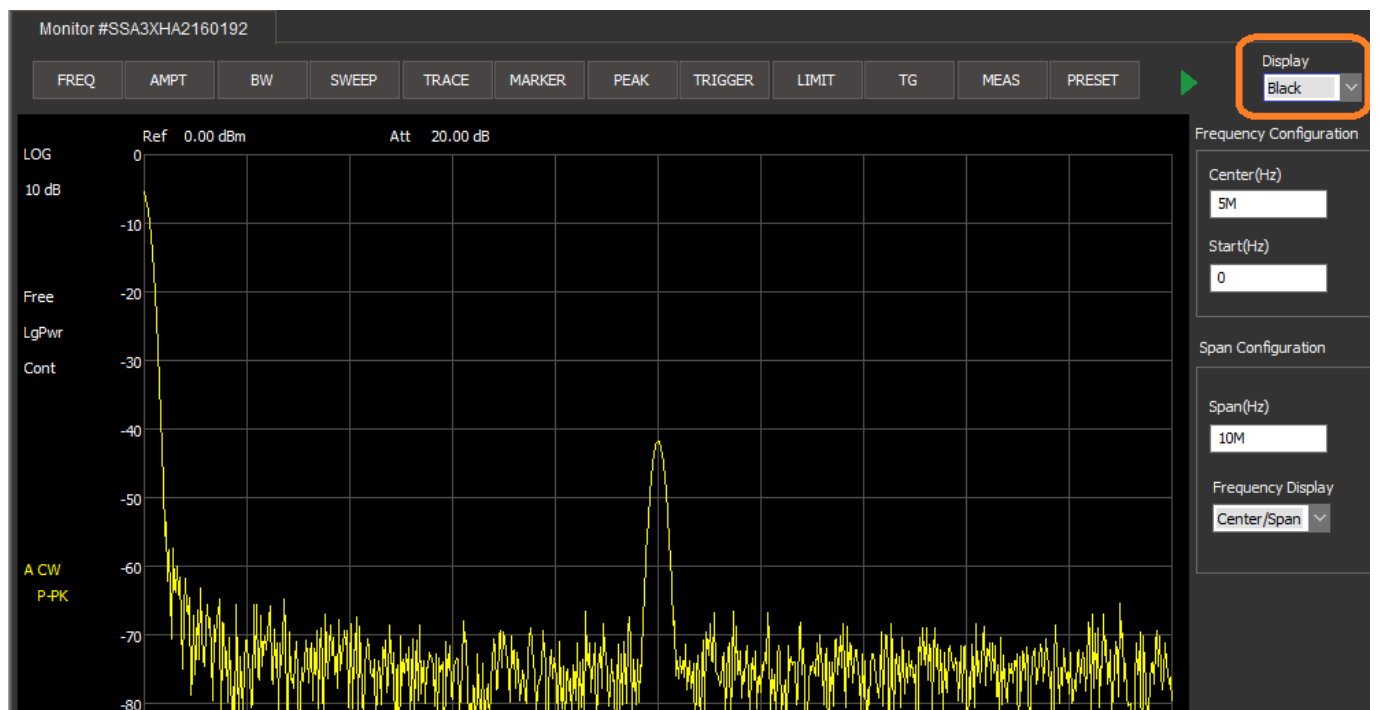


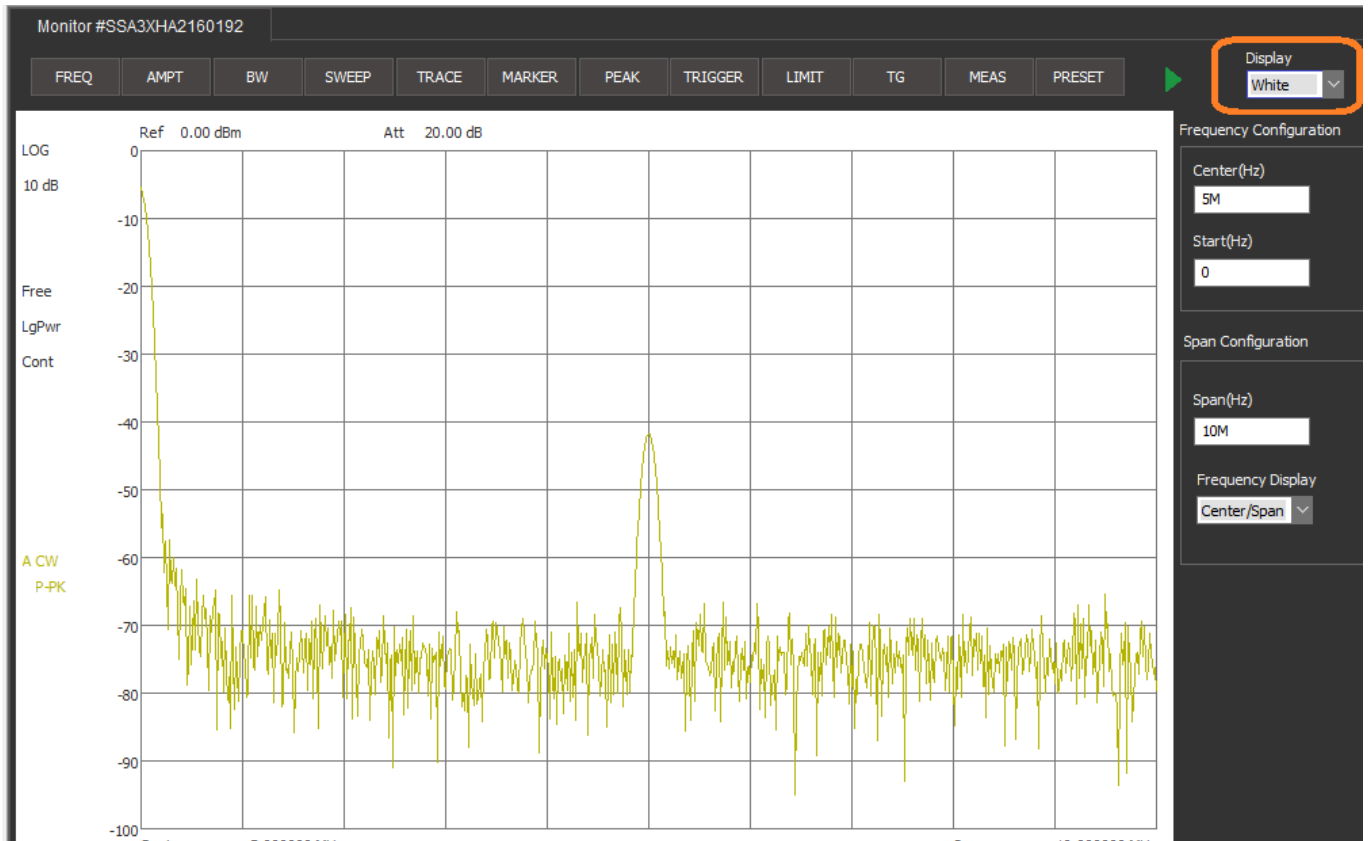

6. To capture screen images, press the Camera icon:

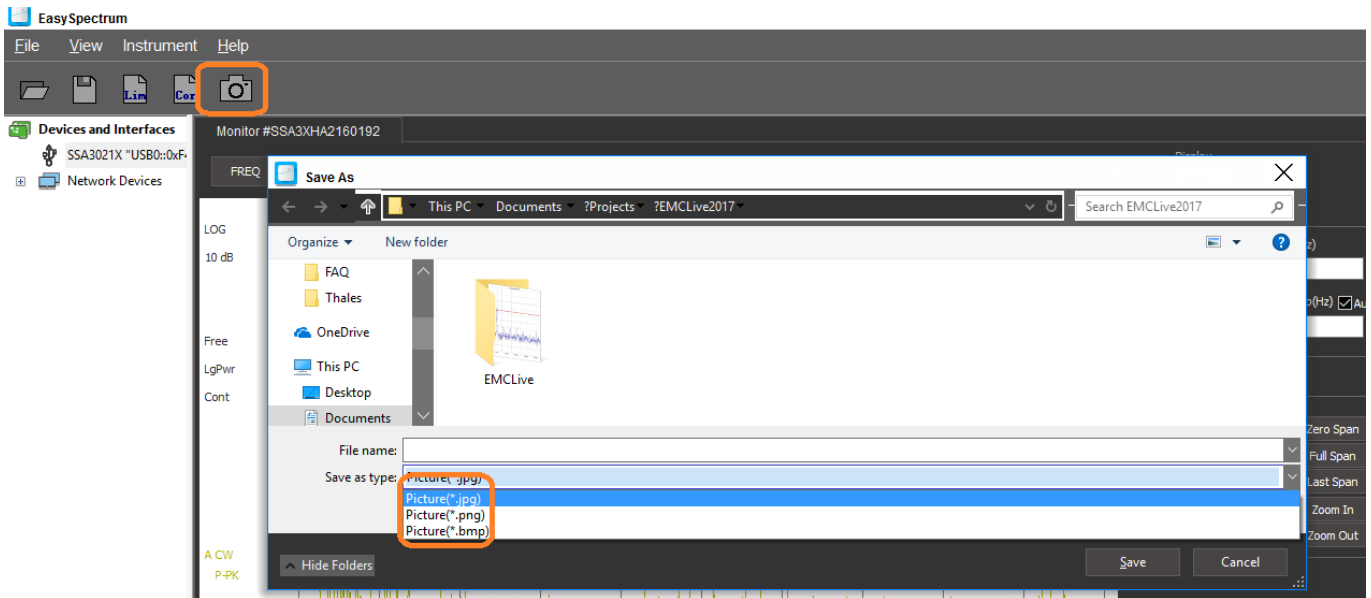


7. To save setups and trace data (\*.CSV format), select the Save icon:

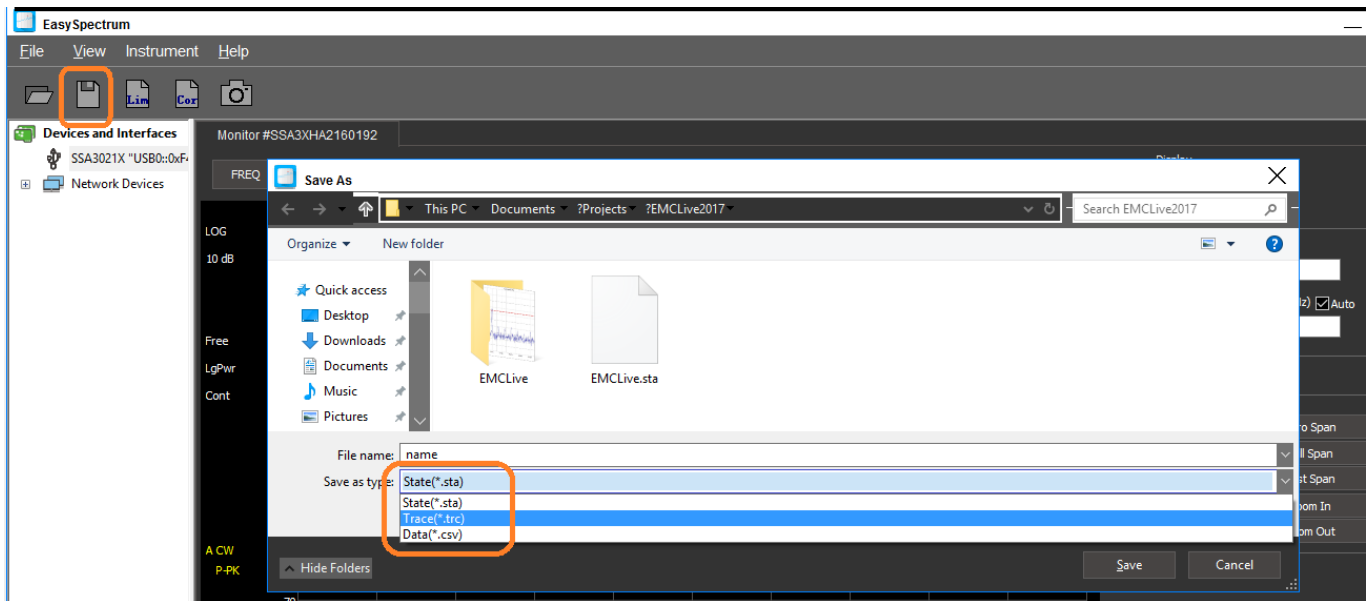


## EMI MODE

The EMI mode is designed to ease test sequence creation for electro-magnetic (EM) pre-compliance testing, including radiated and conducted emissions testing.


1. To begin, right-click on the instrument you wish to control under the Devices and Interfaces entry and select Perform EMI:

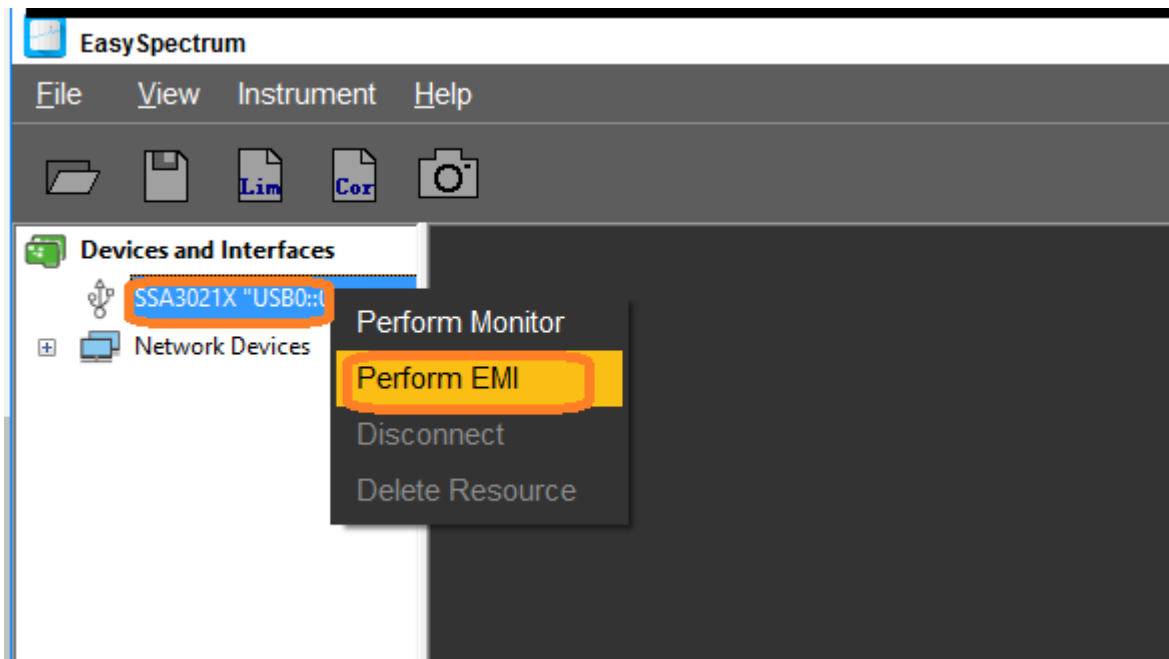

2. This will open the EMI window, as shown below:

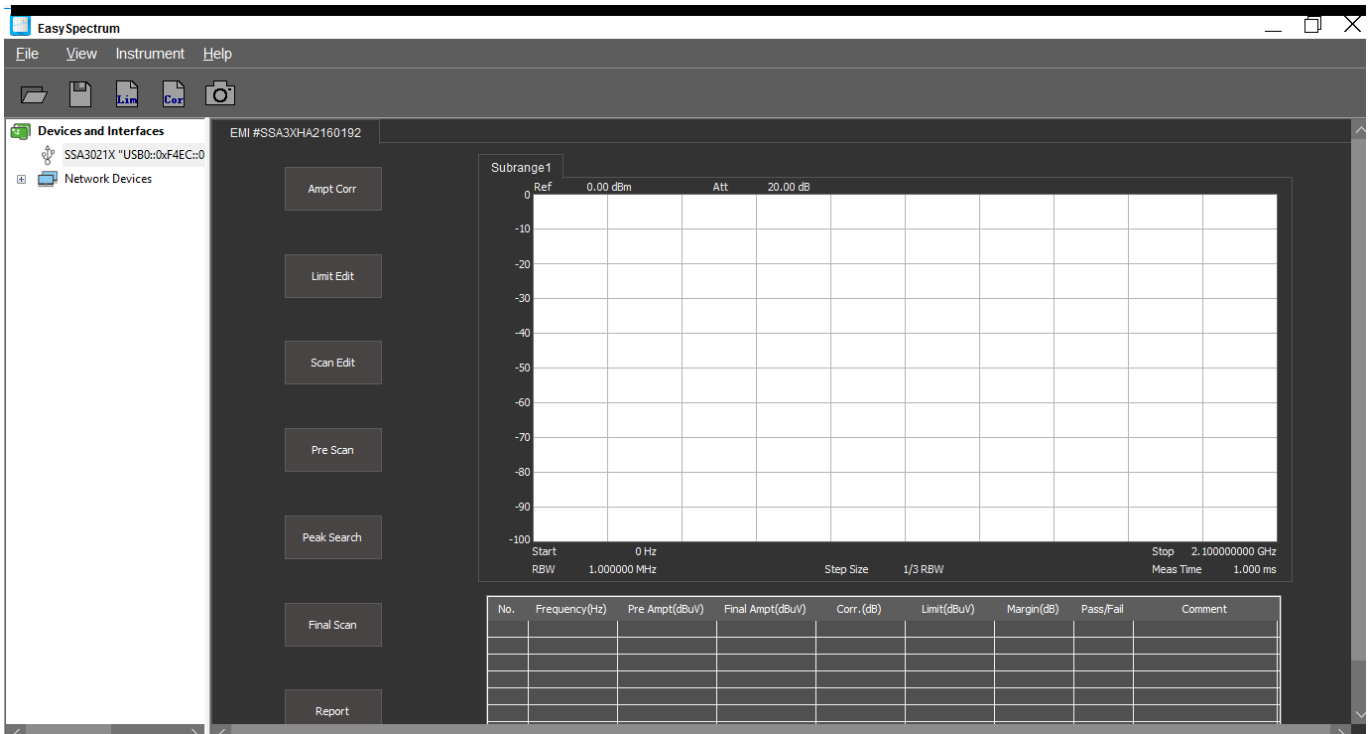

3. Ampt Corr: Amplitude correction can be activated to mathematically adjust the collected data to account for cable/adaptor losses as well as antenna gain factors.

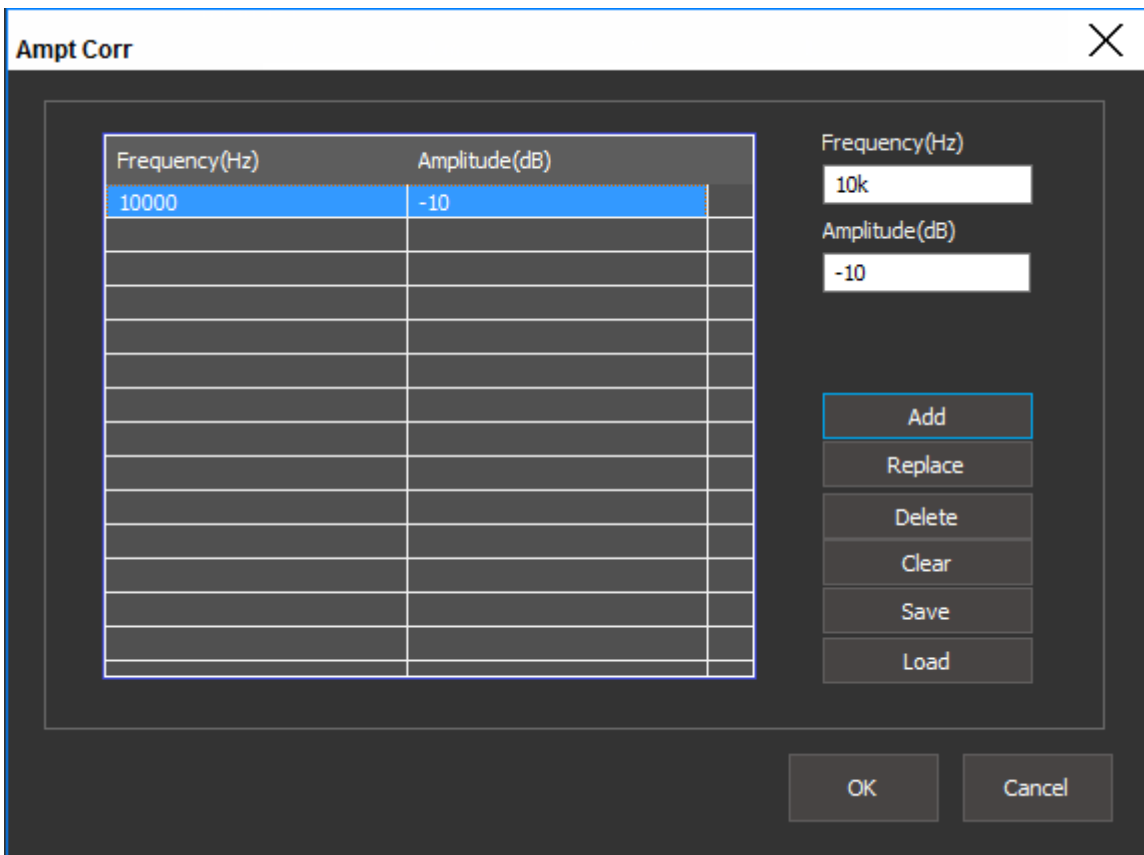

The screenshot shows the 'Ampt Corr' dialog box. It has a table with two columns: 'Frequency(Hz)' and 'Amplitude(dB)'. The first row is highlighted with the values '10000' and '-10'. To the right of the table, there are input fields for 'Frequency(Hz)' (containing '10k') and 'Amplitude(dB)' (containing '-10'). Below these fields are buttons for 'Add', 'Replace', 'Delete', 'Clear', 'Save', and 'Load'. At the bottom of the dialog are 'OK' and 'Cancel' buttons.


Frequency(Hz)	Amplitude(dB)
10000	-10

- You can add a new correction point by entering the frequency and amplitude values and press Add. Each

press of Add will place another point in the list.

**NOTE:** You can use units (k = Kilo/10+3, M = Mega/10+6, G = Giga/10+9) in the appropriate textboxes to make parameter entry more convenient.

- You can replace any point in the list by mousing over the appropriate cell and left click to highlight. Then, enter the correct frequency and amplitude values, and press Replace to overwrite the value as shown below:

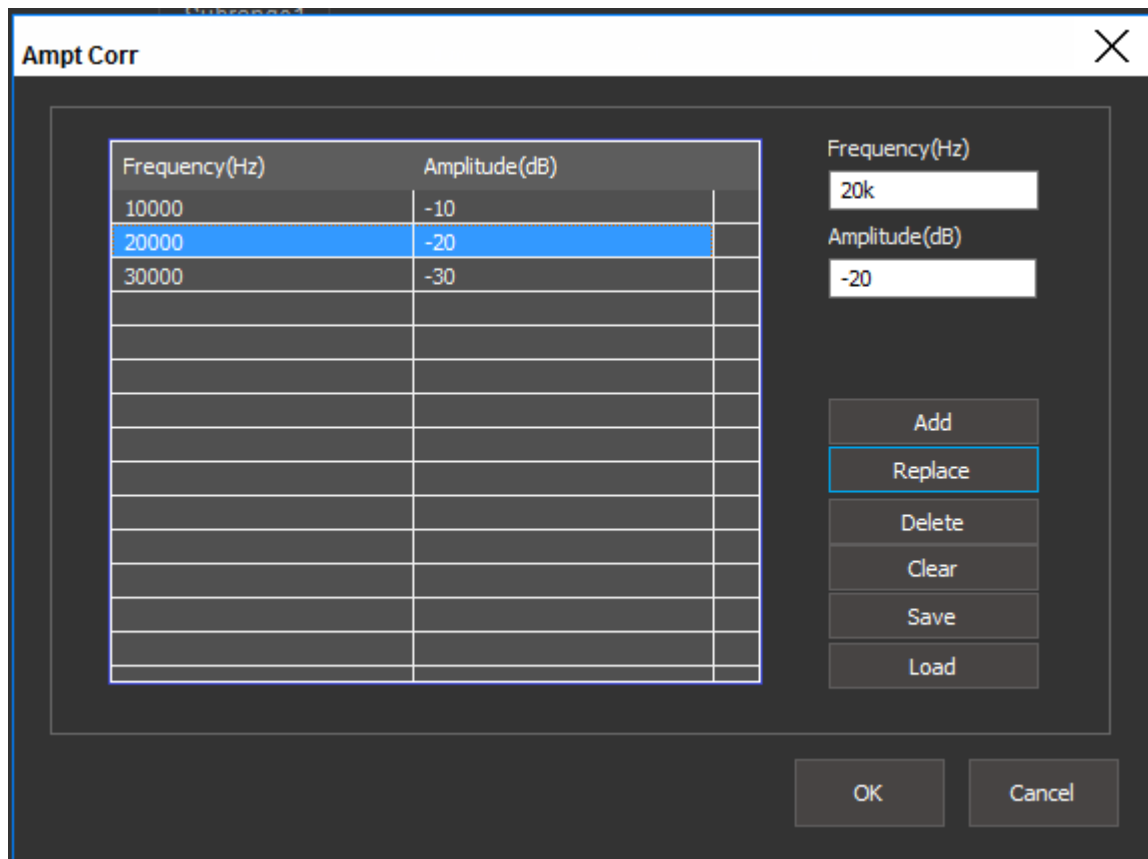

Frequency(Hz)	Amplitude(dB)
10000	-10
20000	-20
30000	-30


Frequency(Hz)  
20k

Amplitude(dB)  
-20

Add  
Replace  
Delete  
Clear  
Save  
Load

OK Cancel



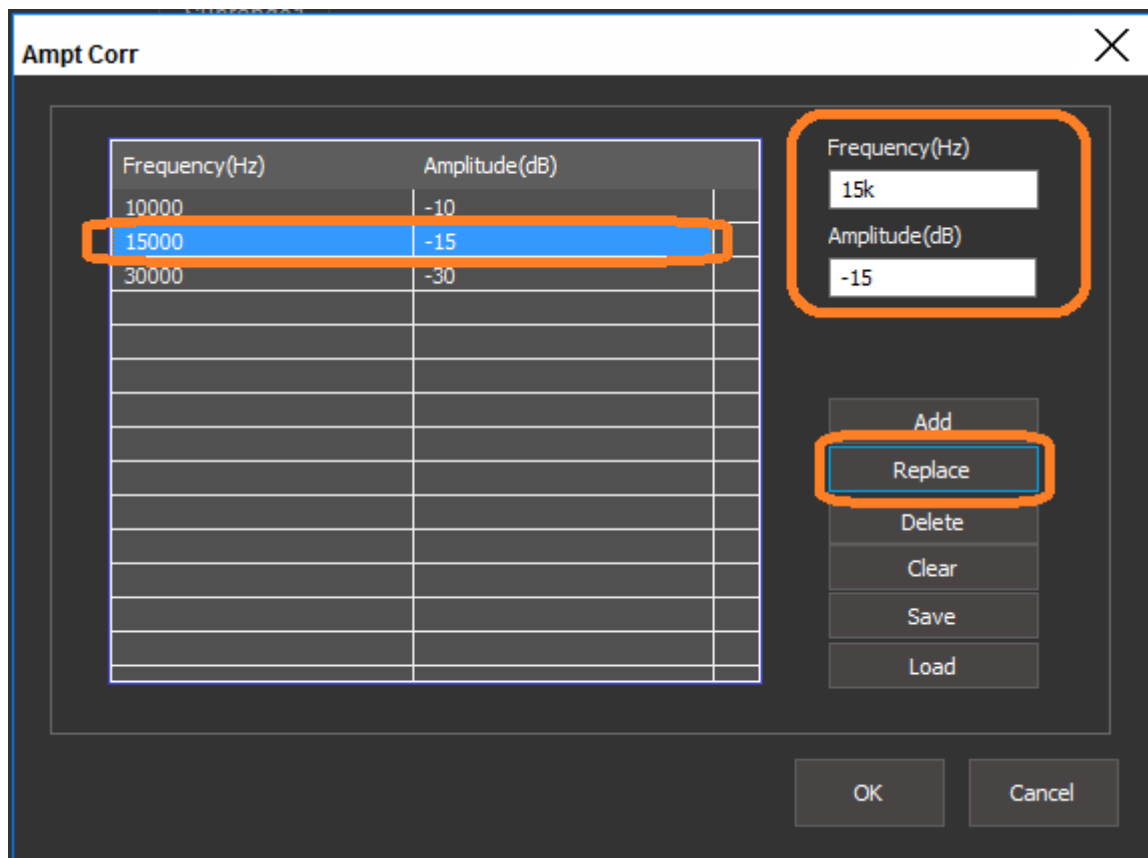

4. Limit Edit: Limit lines clearly delineate the passing and failing values of a test specification. Traces that have elements that are near or exceed the limit line values are considered to be failed peaks in a scan.

Limit Edit

Load Limit

User

Edit Limit

Frequency(Hz)

1.05G

Amplitude(dBm)

0

Amplitude Unit

dBm

Add

Replace

Delete

Clear

Save

Load

Frequency(Hz)	Amplitude(dBm)

Comment

OK

Cancel

- You can add a new correction point by entering the frequency and amplitude values and press Add. Each press of Add will place another point in the list.

Limit Edit

Load Limit

User

Edit Limit

Frequency(Hz)

20k

Amplitude(dBm)

-20

Amplitude Unit

dBm

Add

Replace

Delete

Clear

Save

Load

Frequency(Hz)	Amplitude(dBm)
10000	-10
20000	-20
3000000000	-30

Comment


OK

Cancel


**NOTE:** You can use units (k = Kilo/10+3, M = Mega/10+6, G = Giga/10+9) in the appropriate textboxes to make parameter entry more convenient.

- You can replace any point in the list by mousing over the appropriate cell and left click to highlight. Then, enter the correct frequency and amplitude values, and press Replace to overwrite the value.

There are also a number of pre-defined load limits located under the drop down labeled Load Limits:

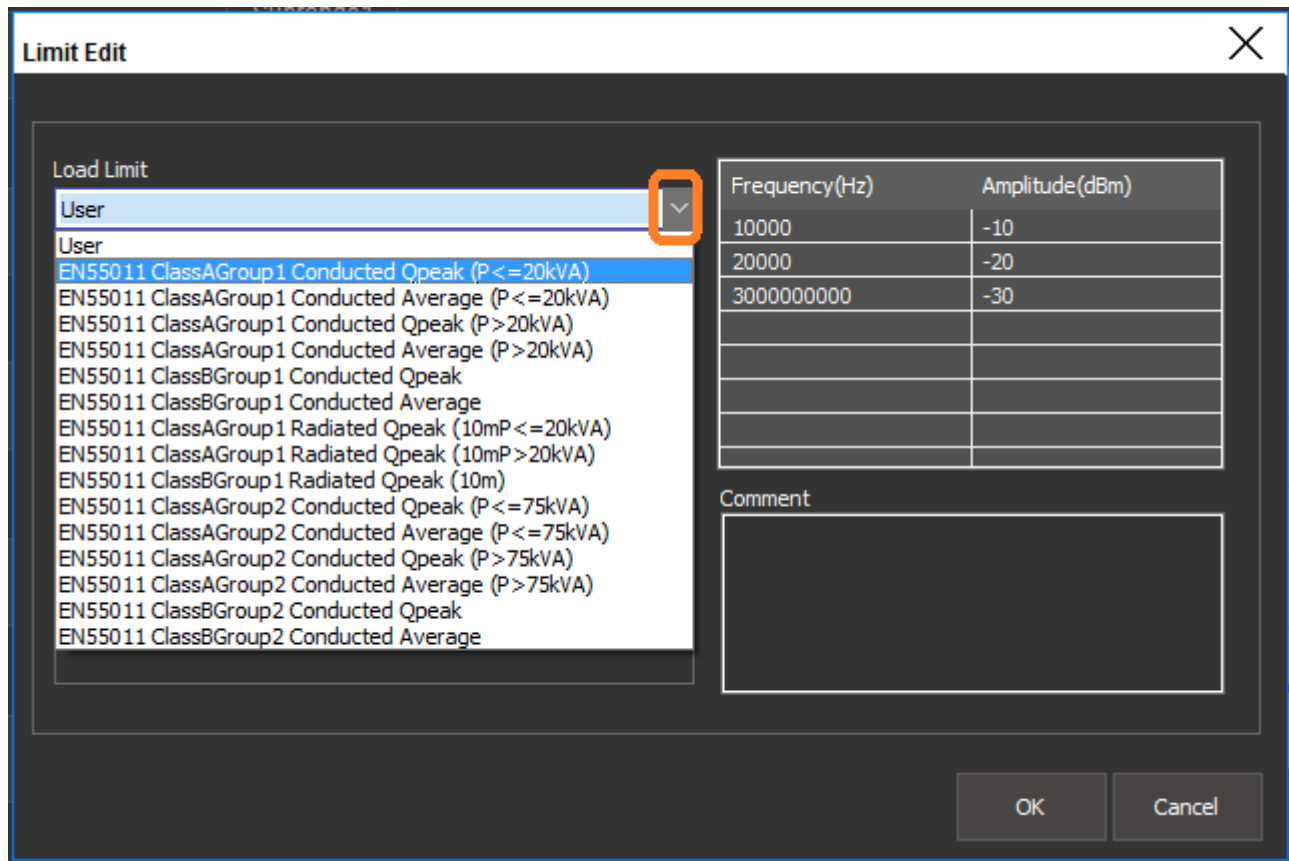

- The limit line will appear in red on the main window:

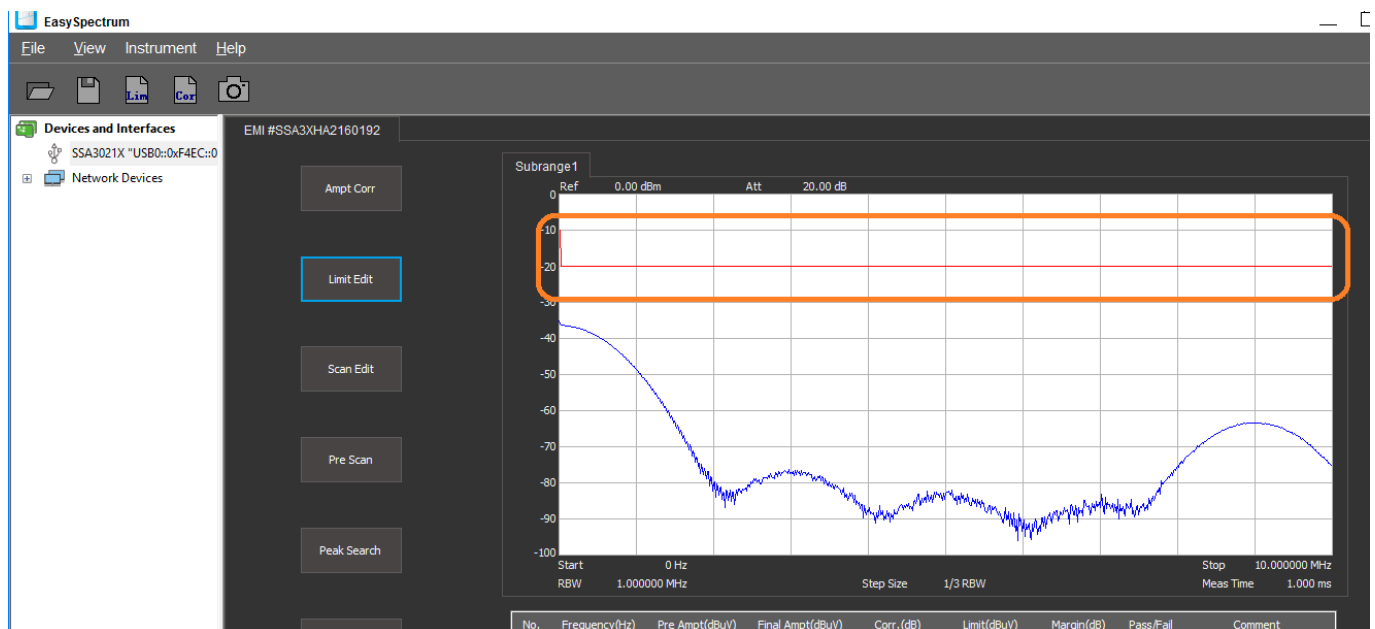

5. Scan Edit: Configure the scan which is broken up into three distinct parts. While they can be configured in many different ways, here are oursuggested settings for preliminary scans:


**NOTE:** The input to any spectrum analyzer is very sensitive to input voltage/powers and transients. If you

are unsure of the potential signal amplitude, protect the analyzer RF input by placing fixed attenuation and transient limiters in series with the device-under-test. 10dB may be a good starting point until you are sure that the maximum input is safe.

– Pre-scan setup: The pre-scan setup configures the instrument for the initial sweep on the DUT. It is initiated after pressing the Pre-Scan button.

Set Scan Start and Stop to encompass the full test frequency range. For example, if you expect to perform a conducted emissions test, set the start frequency as 150k and the stop as 30M as prescribed in the FCC subpart 15 specifications.

Set Pre-Detect to Positive Peak (Pos Peak) for the initial scan. The Positive Peak detector is recommended for this scan because it provides the “worst case” highest valued measurement for each step in the sweep.

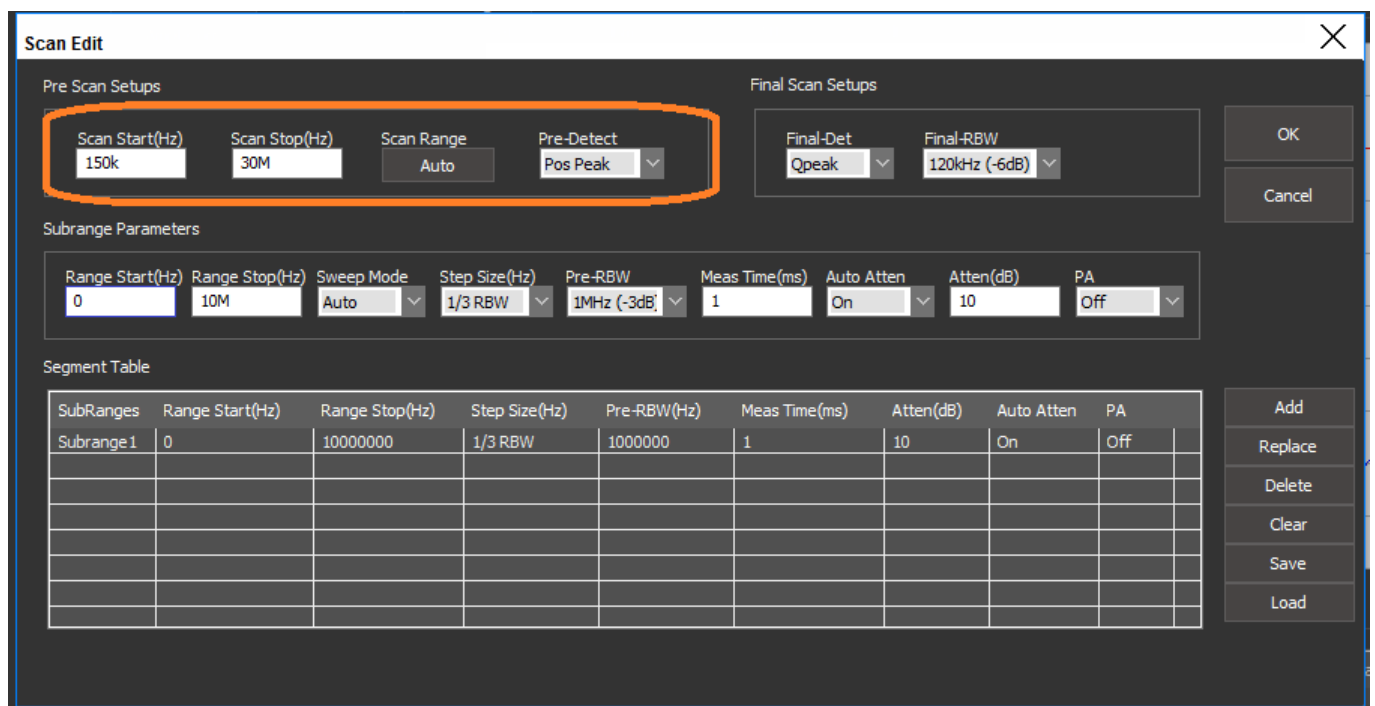

**Scan Edit**

**Pre Scan Setup**

Scan Start(Hz): 150k    Scan Stop(Hz): 30M    Scan Range: Auto    Pre-Detect: Pos Peak

**Final Scan Setup**

Final-Det: Qpeak    Final-RBW: 120kHz (-6dB)

**Subrange Parameters**

Range Start(Hz): 0    Range Stop(Hz): 10M    Sweep Mode: Auto    Step Size(Hz): 1/3 RBW    Pre-RBW: 1MHz (-3dB)    Meas Time(ms): 1    Auto Atten: On    Atten(dB): 10    PA: Off

**Segment Table**

SubRanges	Range Start(Hz)	Range Stop(Hz)	Step Size(Hz)	Pre-RBW(Hz)	Meas Time(ms)	Atten(dB)	Auto Atten	PA
Subrange 1	0	10000000	1/3 RBW	1000000	1	10	On	Off

Buttons: Add, Replace, Delete, Clear, Save, Load

– Subrange Parameters: You can break the main scan into smaller subparts. This will provide higher frequency resolution, but will increase the test time.


For the first scans on a DUT, a single scan consisting of one segment will quickly provide more details into the EM output. If you have peaks that are close (>3dB from the limit line), it may be worthwhile to re-run the test using more segments over the same span. This will provide finer frequency resolution and may help to isolate the root cause of the EM signals.

It is recommended to keep the Sweep mode and Auto Atten (attenuator) = AUTO.


Step size = 1/3 RBW or 1/10 RBW. 1/3 setting will be faster. 1/10 will provide higher frequency resolution.

To accept the setup, press OK.

To Run a Pre-Scan, press Pre Scan in the main window.

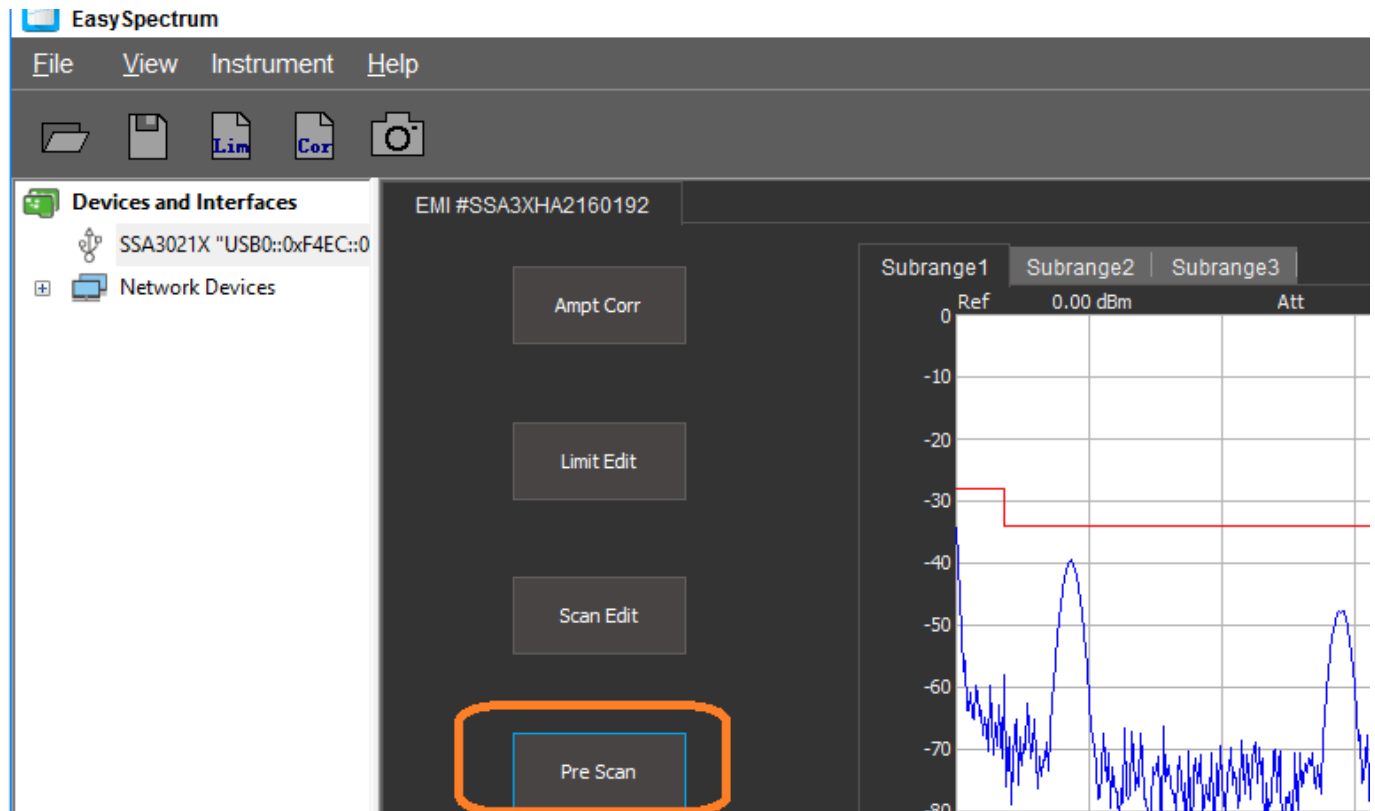

The figures below show a pre-scan configuration consisting of a single segment from 150 kHz to 30 MHz and the subsequent scan data:

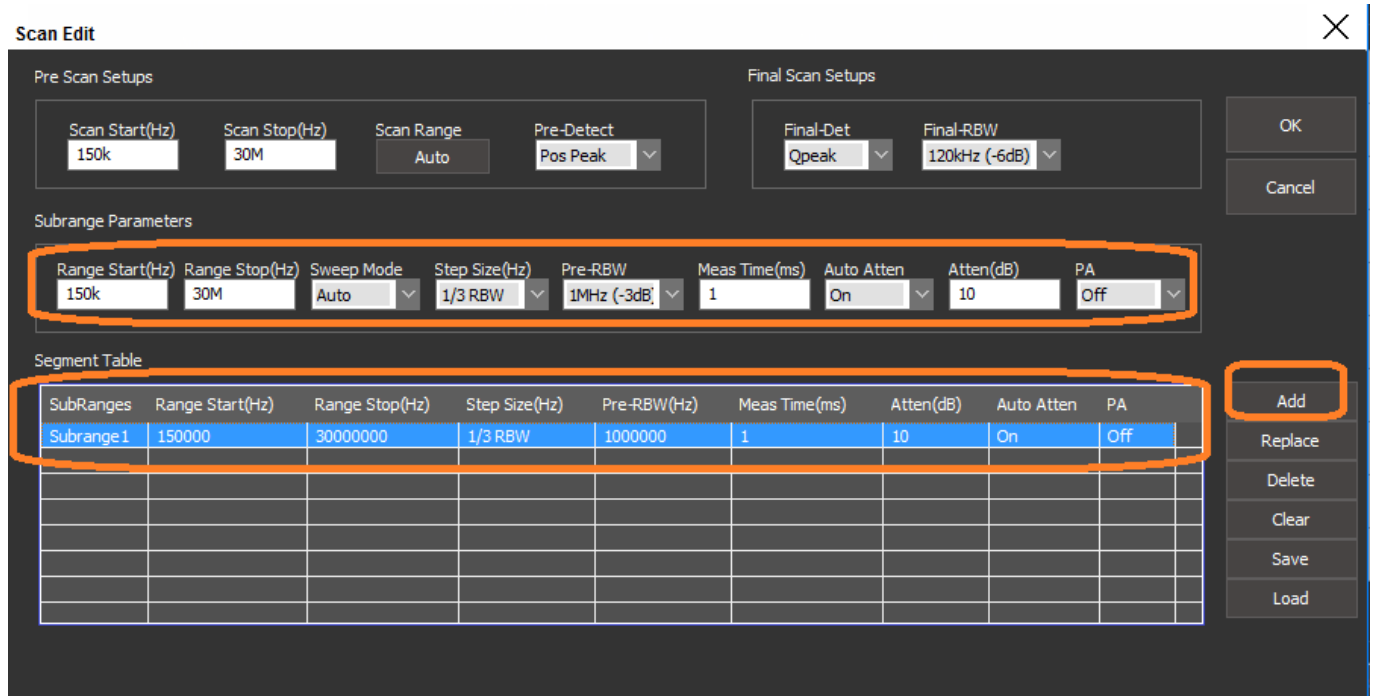



The figures below show the same span covered by three sub-range segments:

### Scan Edit

#### Pre Scan Setups

Scan Start(Hz)

150k

Scan Stop(Hz)

30M

Scan Range

Auto

Pre-Detect

Pos Peak

#### Final Scan Setups

Final-Det

Qpeak

Final-RBW

120kHz (-6dB)

OK

Cancel

#### Subrange Parameters

Range Start(Hz)

20M

Range Stop(Hz)

30M

Sweep Mode

Auto

Step Size(Hz)

1/3 RBW

Pre-RBW

100kHz (-3d)

Meas Time(ms)

1

Auto Atten

On

Atten(dB)

10

PA

Off

#### Segment Table

SubRanges	Range Start(Hz)	Range Stop(Hz)	Step Size(Hz)	Pre-RBW(Hz)	Meas Time(ms)	Atten(dB)	Auto Atten	PA
Subrange1	150000	10000000	1/3 RBW	100000	1	10	On	Off
Subrange2	10000000	20000000	1/3 RBW	100000	1	10	On	Off
Subrange3	20000000	30000000	1/3 RBW	100000	1	10	On	Off

Add


Replace

Delete

Clear

Save

Load

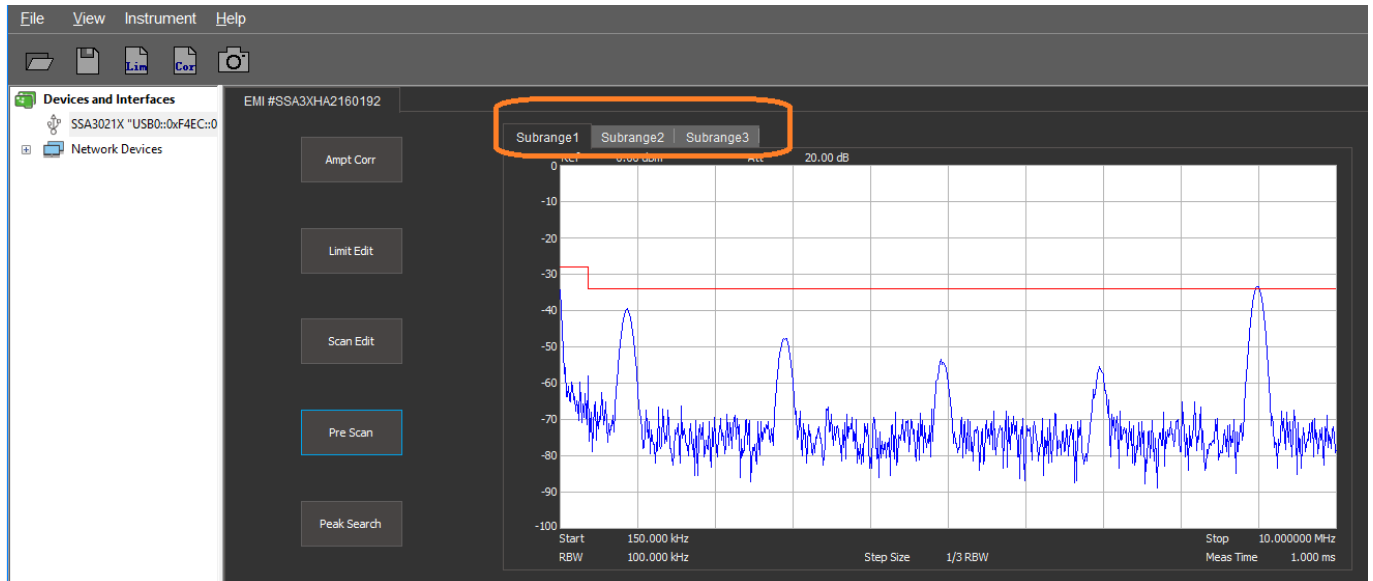


– Final Scan Setup:

**NOTE:** The QPeak (Quasi Peak) detector, 200 Hz / 9 kHz / 120 kHz RBW, and -6dB filter settings are only available on SSA3000X analyzers that have activated EMI options (Part number SSA3000X-EMI).

6. Initiates sequences defined by the Segment table data. You can access the scan data by pressing Scan Edit.

7. Peak Search: Define search parameters that identify peaks. Upon completion of the Peak Search peak definition, the software will perform a “Search” for peaks and fill the peak table with frequency and amplitude information for each peak identified.

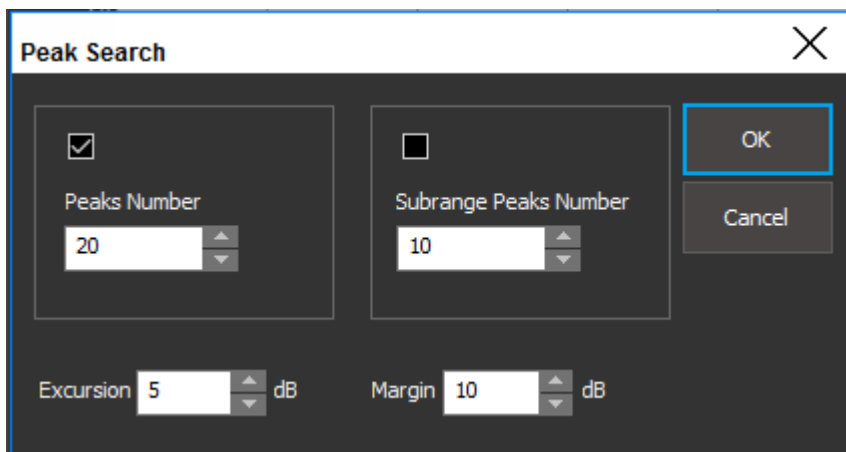

– Peaks Number: The maximum number of peaks to include in the peak list table

– Subrange Peaks Number: The maximum number of peaks to include from each subrange scan (if applicable)


– Excursion: Amplitude value (measured from the noise floor of the scan) that defines a peak. Amplitudes greater than the excursion value are placed into the peak table.



Items in the peak table are re-scanned using the Final Scan settings after pressing Final Scan.

- Margin (added in version 1.0.3.5): Defines peaks as signal elements that have amplitudes that are within the defined margin of the limit line. For example, a 10dB margin will define any signal with an amplitude that is within 10dB of the limit line as a peak and include it in the peak table.

8. Final Scan: Initiate sequences defined by the Final Scan Setups under the Scan Edit menu.

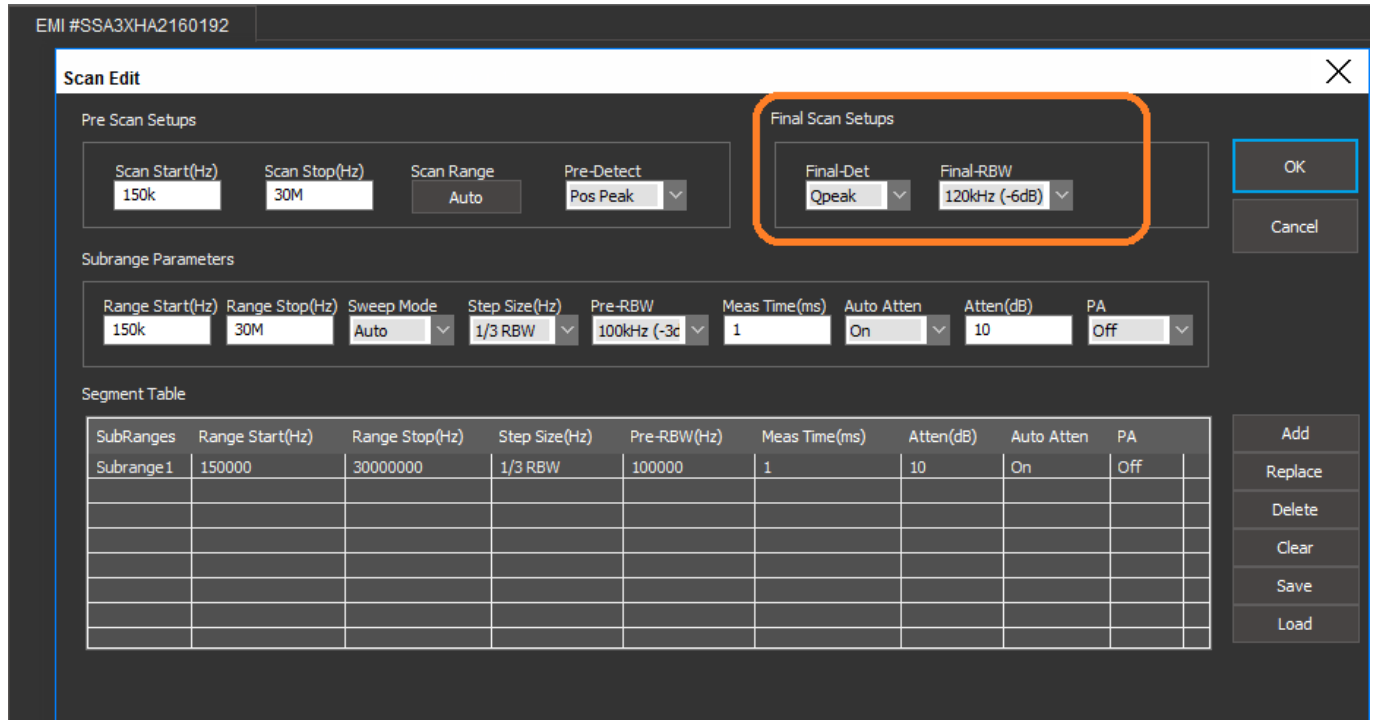

EMI #SSA3XHA2160192

### Scan Edit

**Pre Scan Setups**

Scan Start(Hz): 150k    Scan Stop(Hz): 30M    Scan Range: Auto    Pre-Detect: Pos Peak

**Final Scan Setups**

Final-Det: Qpeak    Final-RBW: 120kHz (-6dB)

**Subrange Parameters**


Range Start(Hz): 150k    Range Stop(Hz): 30M    Sweep Mode: Auto    Step Size(Hz): 1/3 RBW    Pre-RBW: 100kHz (-3d)    Meas Time(ms): 1    Auto Atten: On    Atten(dB): 10    PA: Off

**Segment Table**

SubRanges	Range Start(Hz)	Range Stop(Hz)	Step Size(Hz)	Pre-RBW(Hz)	Meas Time(ms)	Atten(dB)	Auto Atten	PA	
Subrange1	150000	30000000	1/3 RBW	100000	1	10	On	Off	

Buttons: Add, Replace, Delete, Clear, Save, Load, OK, Cancel

The Final Scan operations are applied to each peak in the peak table only. The SSA is placed into zero span mode centered on the peak frequency from the table and the scan commences.

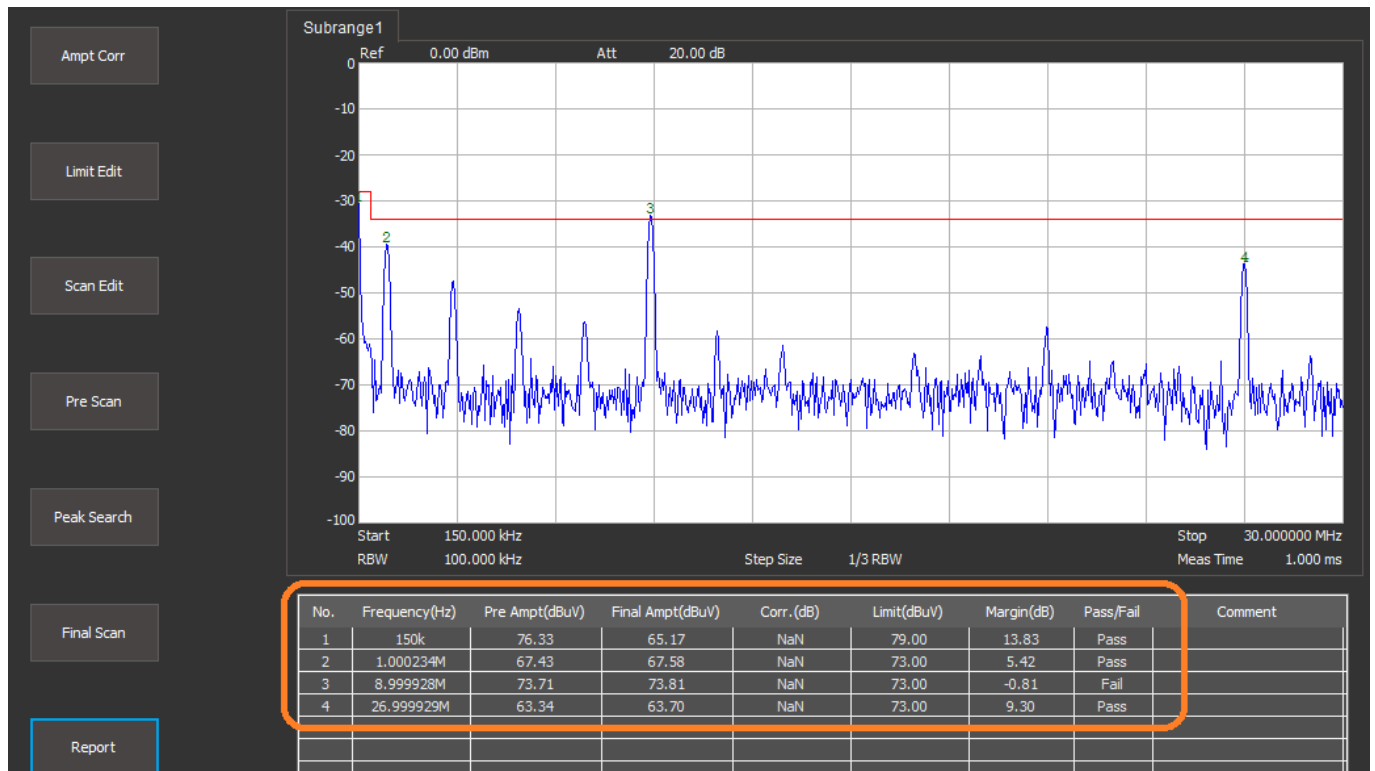

The peak table shows the frequency, pre-scan amplitude, final scan amplitude, the limit at that frequency, the margin between the peak and the limit, and the pass/fail of that peak based on final scan data.

**NOTE:** The QPeak (Quasi Peak) detector, 200 Hz / 9 kHz / 120 kHz RBW, and -6dB filter settings are only available on SSA3000X analyzers that have activated EMI options (Part number SSA3000X-EMI).

Quasi Peak detectors follow a defined response curve. Measurements made with the QPeak setting can take significantly longer than similar scans made with other detector types.

9. Report: After completing your initial scans, you can save the information by pressing the Report button. This provides a number of fields that can be filled in using information to help differentiate tests and keep track of important settings, etc.. You can save the report as an HTML document for easy viewing later.

## Generate Report



OK

Cancel

### Measurement Environment

Temperature(°C)

20

Humidity(RH)

20%

Test Place

electromagnetic anechoic chamber

Tested By

### Device Under Test

Name

Model Number

Serial Number

Manufacturer

### Test Instrument

Name

Model Number

Serial Number

Manufacturer

SSA3021X

S/N: SSA3XHA2160192

Siglent Technologies

### Test Instrument List

Add

Delete

Clear

Name

Model Number

Serial Number

Manufacturer

### Reference Standard

Note



### **North American Headquarters**

SIGLENT Technologies America, Inc  
6557 Cochran Rd Solon, Ohio 44139  
Tel: 440-398-5800  
Toll Free: 877-515-5551  
Fax: 440-399-1211  
[info@siglent.com](mailto:info@siglent.com)  
[www.siglentamerica.com/](http://www.siglentamerica.com/)

### **European Sales Offices**

SIGLENT TECHNOLOGIES EUROPE GmbH  
Staetzlinger Str. 70  
86165 Augsburg, Germany  
Tel: +49(0)-821-666 0 111 0  
Fax: +49(0)-821-666 0 111 22  
[info-eu@siglent.com](mailto:info-eu@siglent.com)  
[www.siglenteu.com](http://www.siglenteu.com)

### **Asian Headquarters**

SIGLENT TECHNOLOGIES CO., LTD.  
Blog No.4 & No.5, Antongda Industrial Zone,  
3rd Liuxian Road, Bao'an District,  
Shenzhen, 518101, China.  
Tel: + 86 755 3661 5186  
Fax: + 86 755 3359 1582  
[sales@siglent.com](mailto:sales@siglent.com)  
[www.siglent.com/ens](http://www.siglent.com/ens)