



## SPD1000X/3303X/X-E/C Firmware Update Instructions

Firmware updates for the SPD3303X/X-E/C power supplies are made through a PC which has Siglent's EasyPower software installed (EasyPower can be downloaded at <http://www.siglentamerica.com/gjjrj-xq.aspx?id=1459&tid=14> ) To upgrade the instrument via a USBTMC cable please note that you will need the NIVISA Driver ( This driver can be found at <http://www.ni.com/download/ni-visa-16.0/6184/en/>. It should be installed before installing EasyPower ) .


1. Make sure that the power supply's USB cable is connected to the PC and open the EasyPower program on your computer.
2. Click "Search" on the toolbar then select "USBTMC" on the Connect Type window and click "open" on the next ConnectByUSBTMC window.

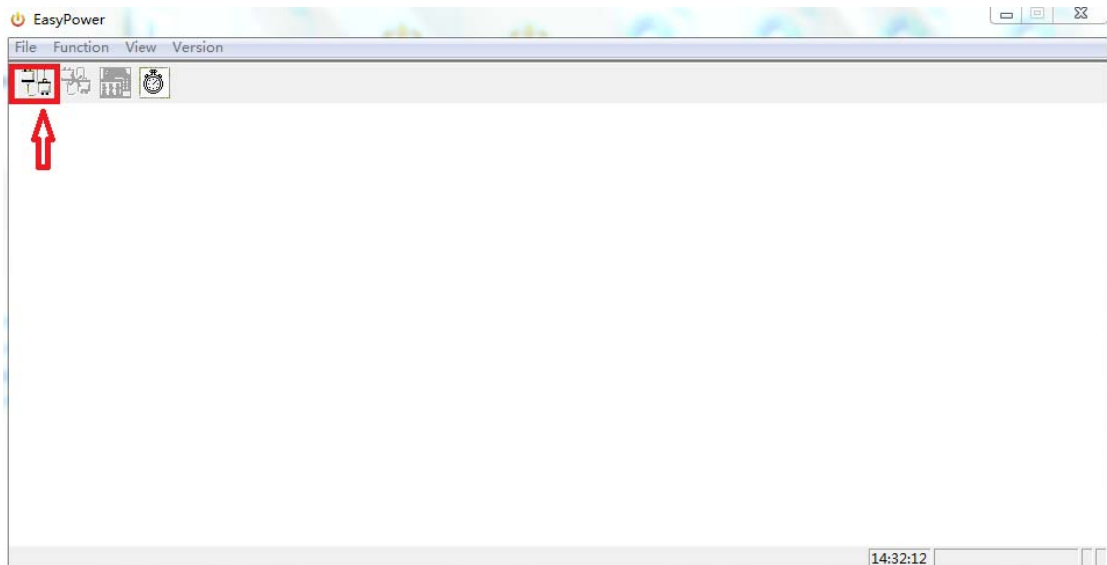


3. Click "Version" on the menu bar to access "Upgrade" on the submenu.

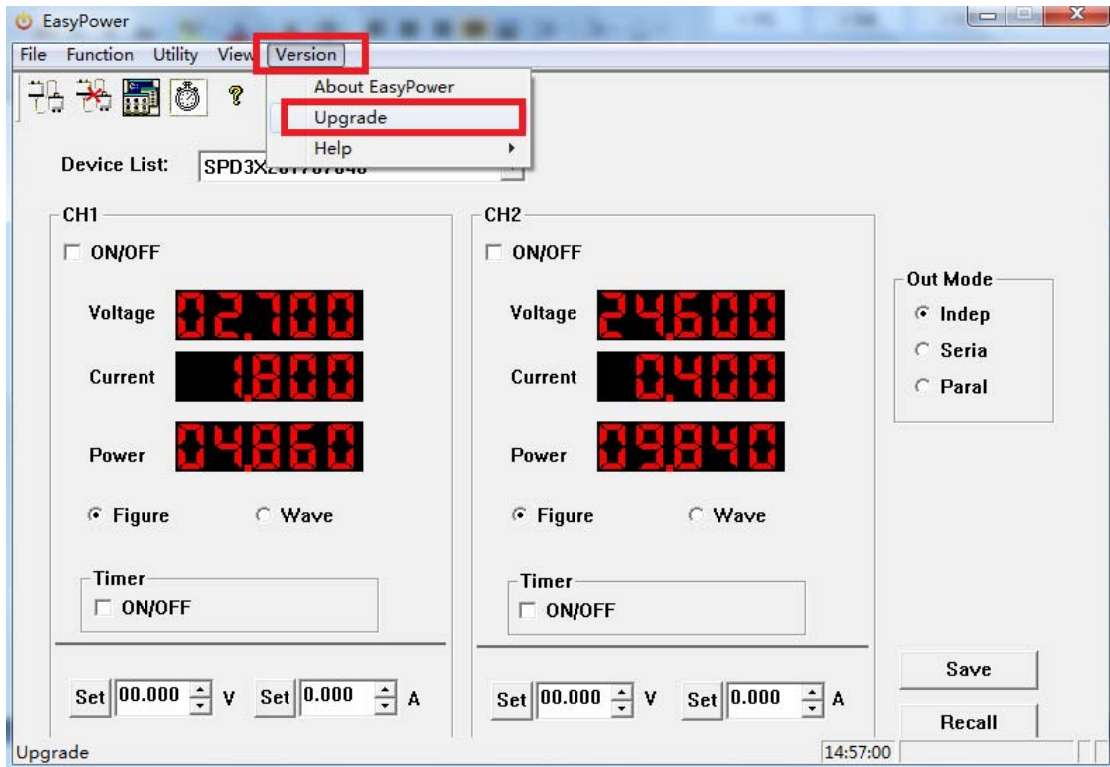



4. Next, select the file which you want to upgrade on the dialog box.

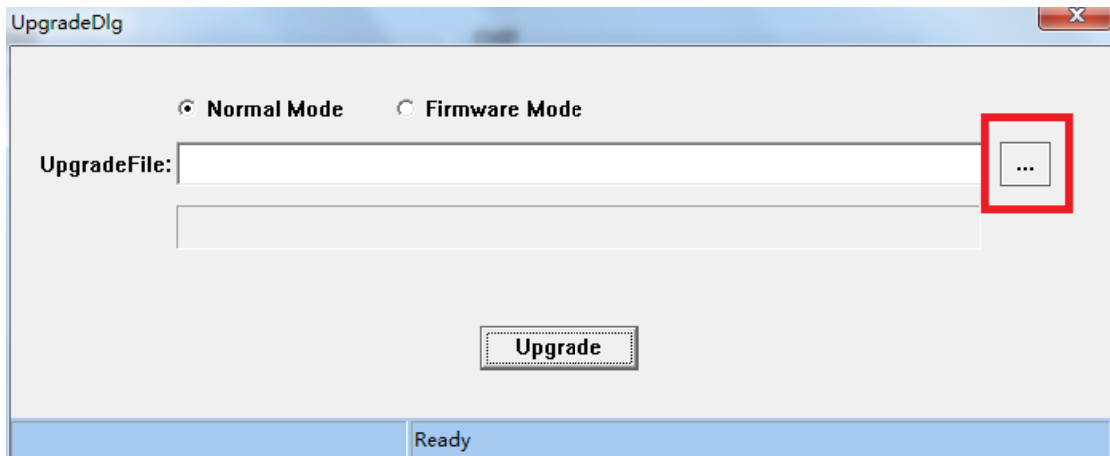

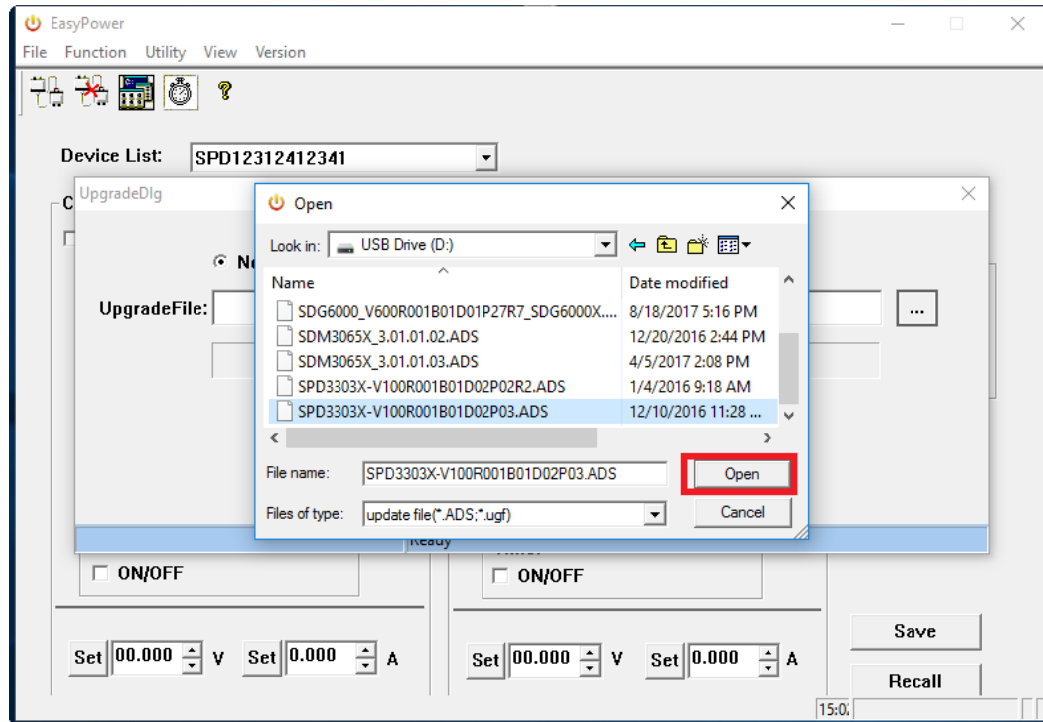


5. Click the “Upgrade” button and the Connect Type is “USBTMC” on the next dialog box.

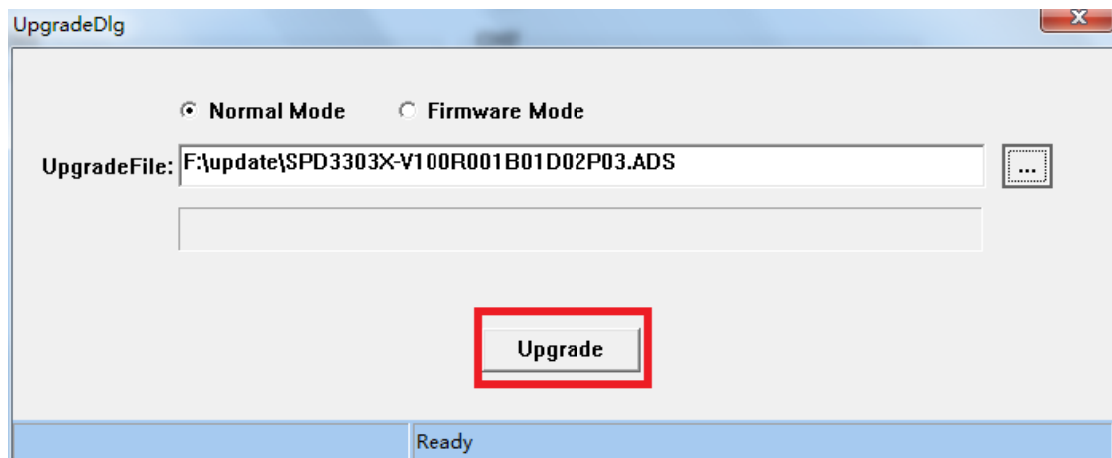


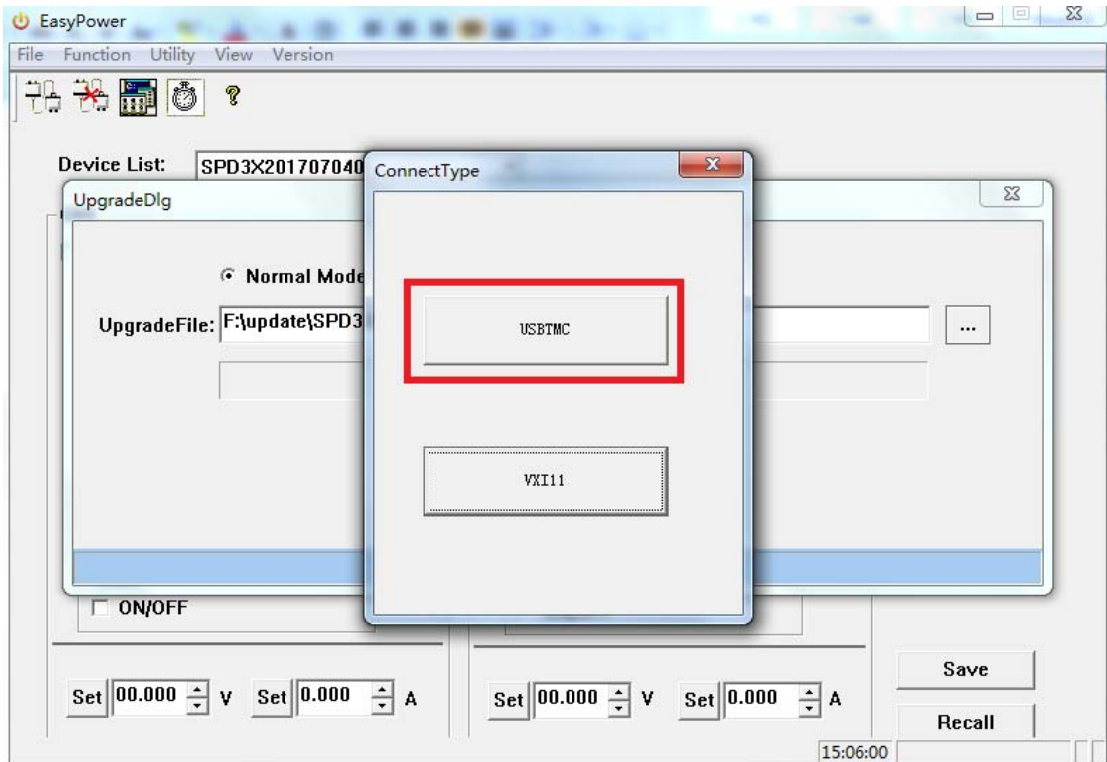

6. Then click “Open” on the current window.

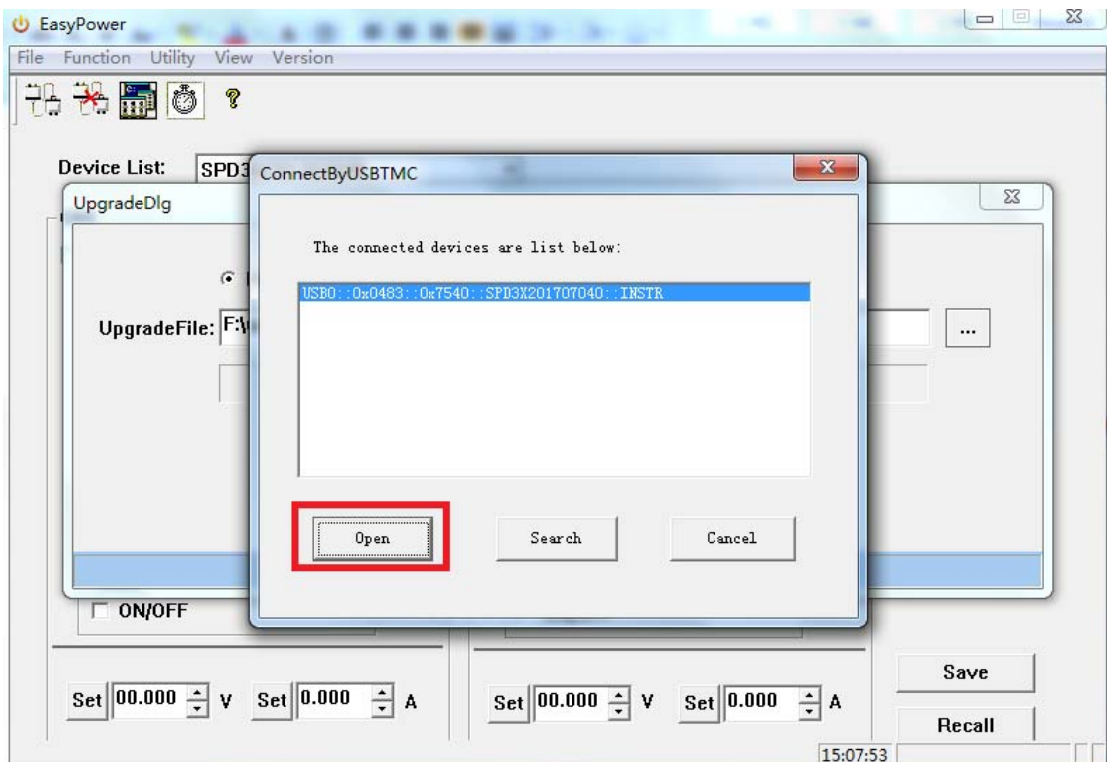

7. The power supply will now begin the update process.

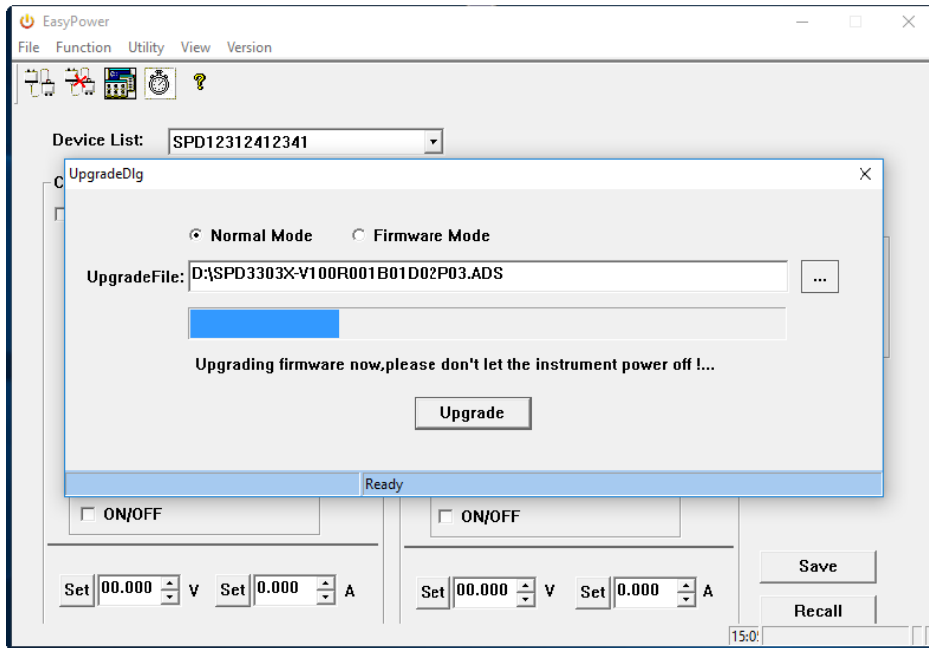

8. When the upgrade has completed, please click “ok” on the dialog box and the power supply will restart itself.

