


SHN900A Upgrade Instructions


Upgrade from a U-disk (USB Memory device)

WARNING: DO NOT shut off the instrument until the update is completed.


1. Copy the update file (*.ads) to a FLASH type U-disk, and then insert the U-disk into one of the USB host ports of the instrument.
2. Press the **System** button on the front panel, and press "**System** -> **Upgrade**". The following the menu should pop up and allow you to select the upgrade file
3. Select the U disk, and then select the correct update file (*.ads) in the pop-up resource manager

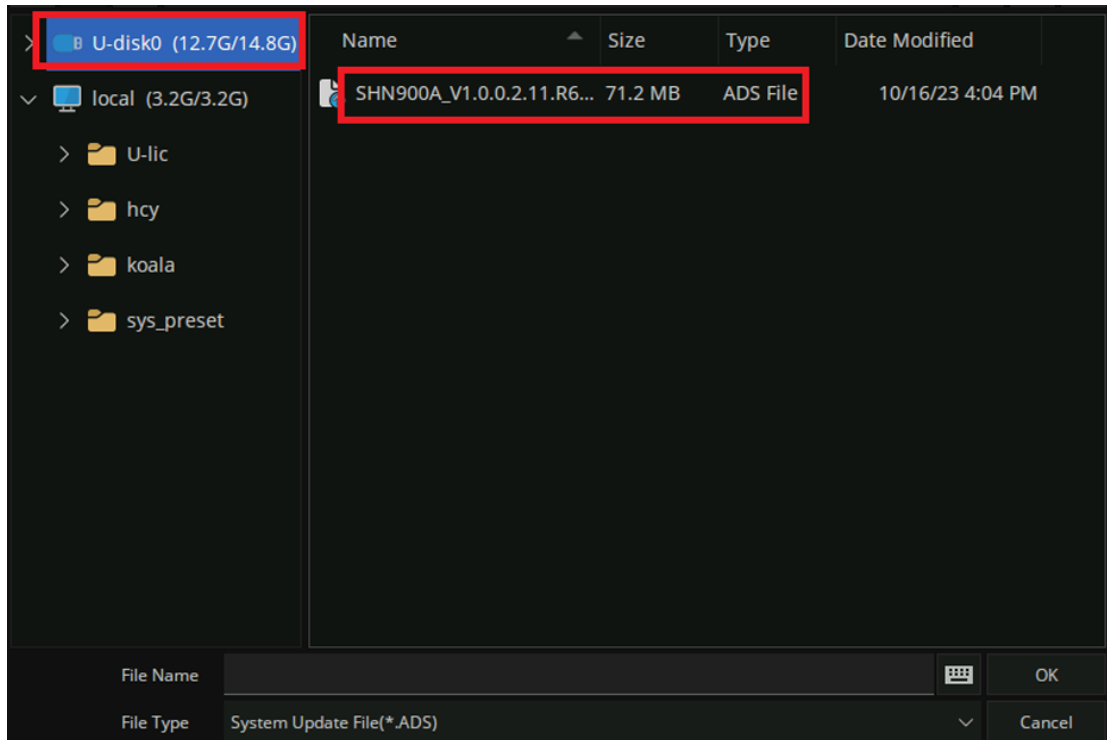

4. Click **OK** in the interface above and will pop up upgrade operation dialog. Click **OK** to perform the upgrade operation:

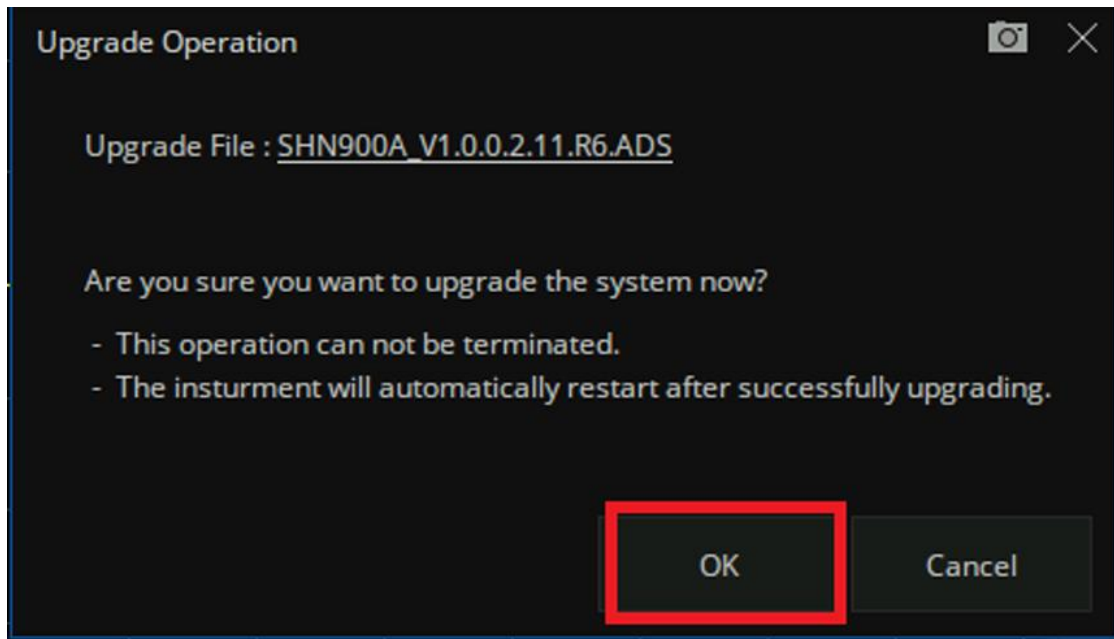

5. Click **OK** in the interface above, the SNA5000A will start to upgrade. When it finishes upgrading and will reboot by itself.

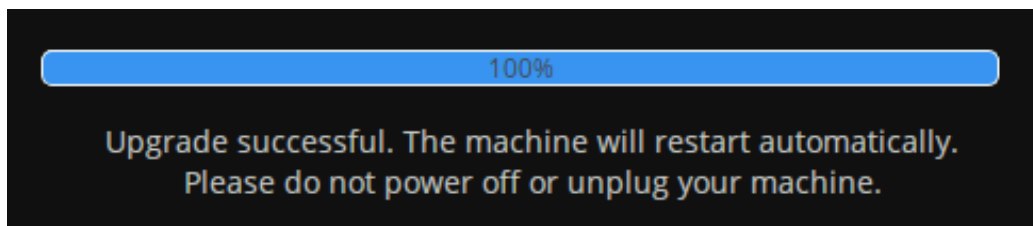

6. After the instrument reboots, check the version number through the **Utility->Help->About** to confirm if the upgrade is successful.



WARNING: DO NOT shut off the instrument until the update is completed.