


SSA3000X Firmware Update Instructions

Note :

If you want to update to V1.2.9.1 , please make sure that the current SW version is V1.2.8.1 or the newer SW version. Then you can update the SW version to 1.2.9.1 directly.

If the firmware version is before 1.2.8.1 (V1.2.8.1 is not included) , please download the necessary SW version “SSA3000X Firmware-1.2.8.1” through the below website :

<https://www.siglentamerica.com/service-and-support/firmware-software/spectrum-analyzers/#ssa3000x-series>.

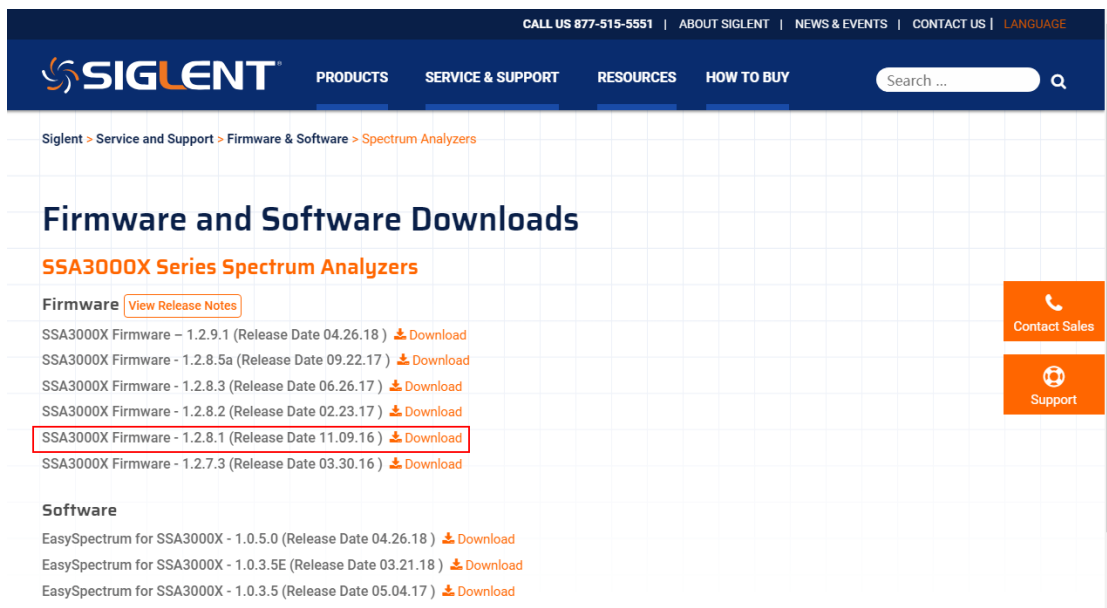

Note: During the updating, do not cut off the power or pull out the U-disk and if the upgrade process gets stuck, please contact SIGLENT immediately at support@siglent.com.

1. Please firstly unzip the firmware file (.ADS) in the update package to a U-disk.
2. Insert the U-disk.
3. Press **System** and then press **System Info**, we can enter **Firmware Update** in sys info menu.

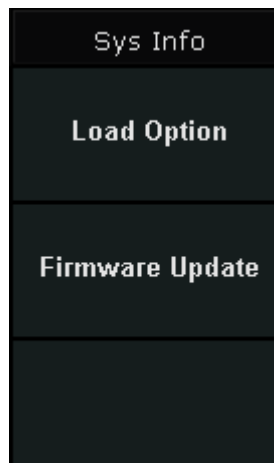


Figure 1 System Info function menu

4. Press **Firmware Update** and then enter the file system (or you can press **File** button to enter the file system).

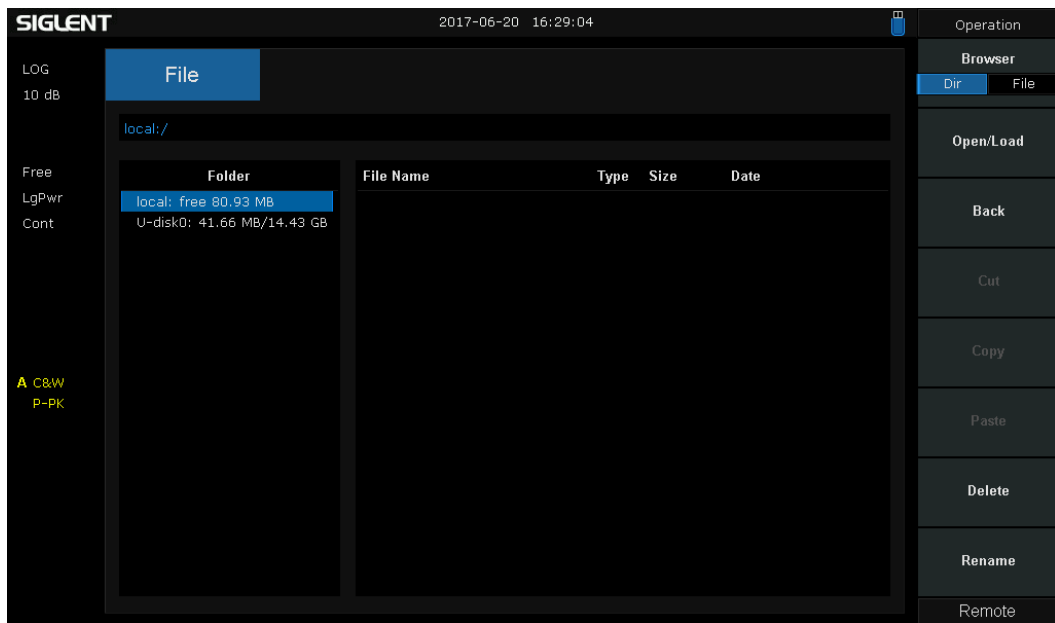


Figure 2 File system

5. Use the universal knob to select the right update firmware which should be with an ADS postfix. Press **Open/Load**, we will see an info window then and then press **Enter** to run upgrade program. It will take about 1~2 minutes.

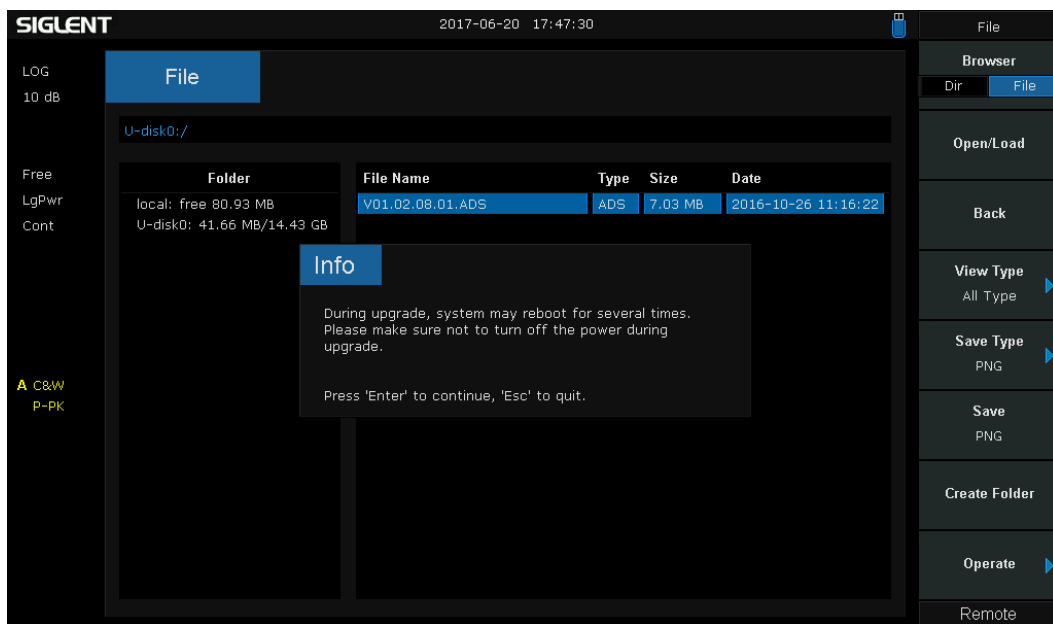


Figure 3 Update

6. After the spectrum analyzer restarted, we can check the version information in sys info.

Note: During the updating, do not cut off the power or pull out the U-disk and if the upgrade process gets stuck, please contact SIGLENT immediately at support@siglent.com.