

How do I invert colors on saved image files with an SSA3000X?

October 25, 2017

The Siglent SSA3000X spectrum analyzer can save images of the display in a number of common picture formats, including JPG and BMP file types.

Normally, the background of the images matches that of the instrument. This black background may be problematic when physically printing these images for reports.

To save on printer supplies, you can configure the instrument to save the images with an inverted color scheme.

To enable inverted colors:

1. Press Display on the front panel
2. Set the Screenshot value to Inverse

Figures 1 and 2 on the following page show how the change in color scheme will alter the saved image.

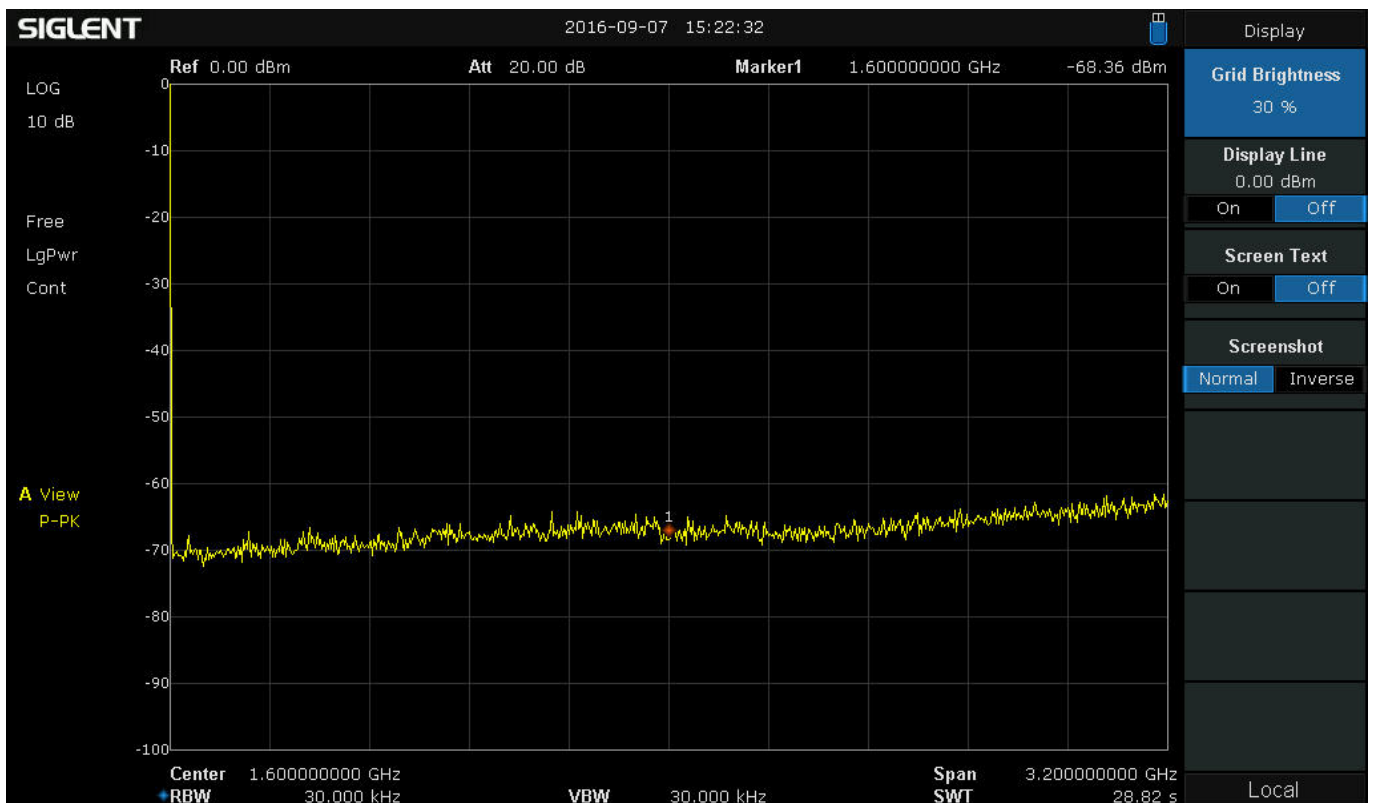


Figure 1: Screenshot of an SSA3000X with normal color scheme.

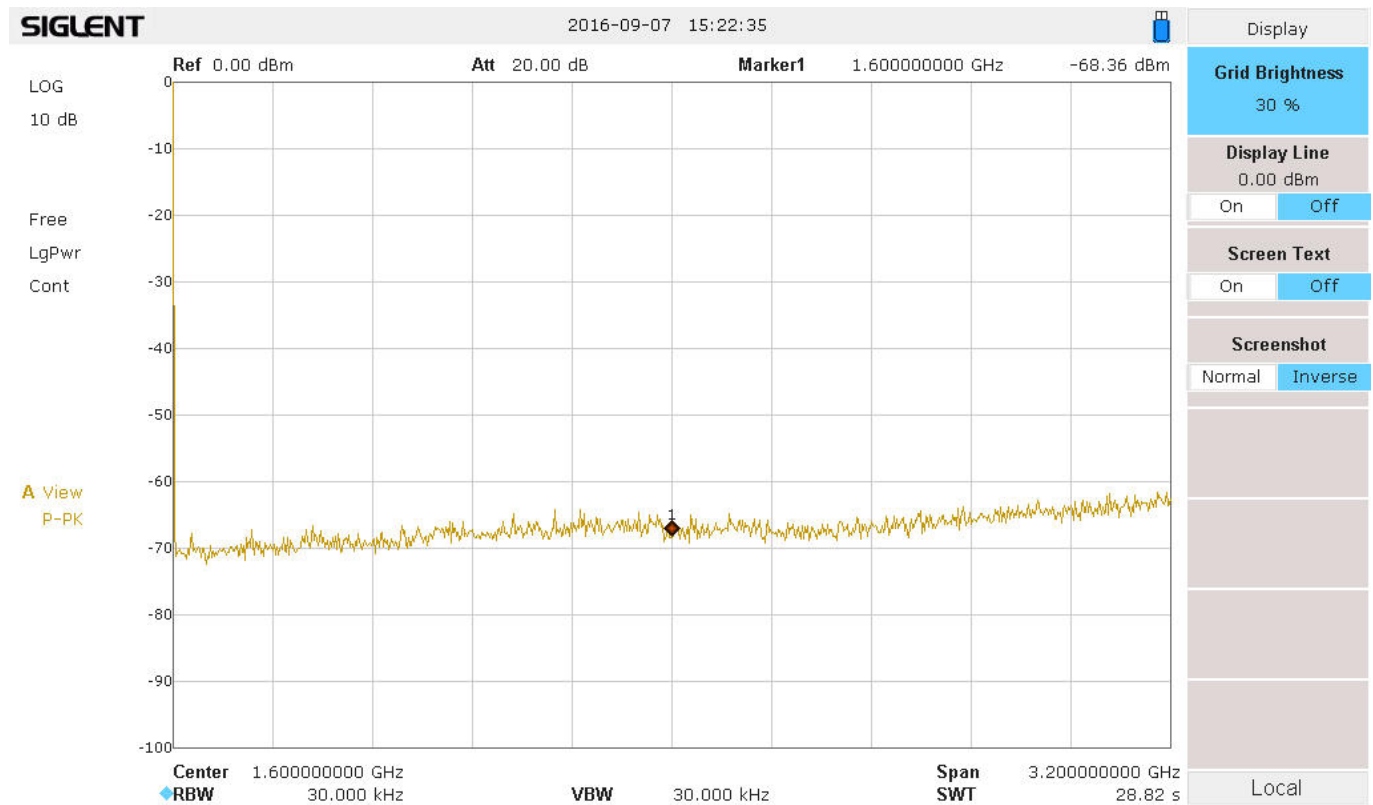


Figure 2: Screenshot of an SSA3000X with inverse color scheme.



North American Headquarters

SIGLENT Technologies America, Inc
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES EUROPE GmbH
Staetzlinger Str. 70
86165 Augsburg, Germany
Tel: +49(0)-821-666 0 111 0
Fax: +49(0)-821-666 0 111 22
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3661 5186
Fax: + 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens