

SIGLENT SPA1010 Amplifier output control


February 15, 2019

The SIGLENT SPA1010 Amplifier can be a useful accessory for applications requiring higher voltage and/or current from a signal source like a SIGLENT SDG arbitrary waveform generator.

The SPA features a power-on indicator LED, Short LED, a X10 indicator LED, and a set of switches on the front panel.

To use:

1. Connect the output of your source to the SPA input.
2. Connect the SPA output to your DUT.
3. Select x1 (unity voltage) or x10 (10 x source voltage)
4. Select ON when you wish to source an output signal from the SPA

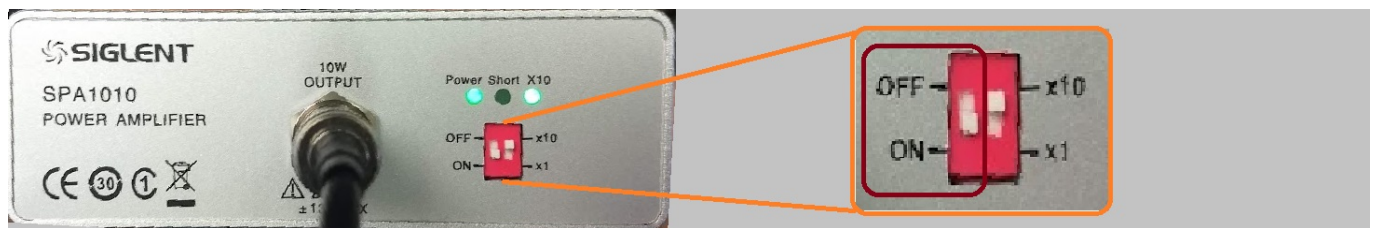

NOTE: If the power switch is left in the OFF position, the output will be held at 0 V.



North American Headquarters

SIGLENT Technologies America, Inc
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free:877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES EUROPE GmbH
Staetzlinger Str. 70
86165 Augsburg, Germany
Tel: +49(0)-821-666 0 111 0
Fax: +49(0)-821-666 0 111 22
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel:+ 86 755 3661 5186
Fax:+ 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens