


View two limit lines using EasySpectrum



December 18, 2018

This operating tip describes how to activate two limits using Monitor mode in SIGLENT's EasySpectrum software:


Open monitor mode by right-clicking on the instrument you wish to control:

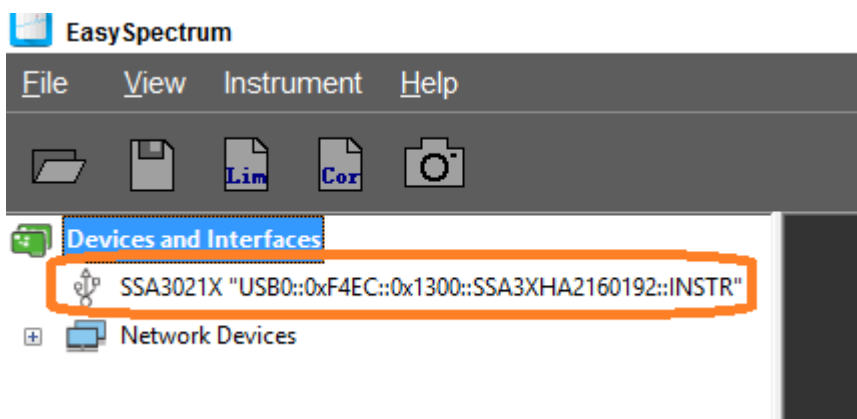


Select Limit, Set the Type to Point, and then Edit:

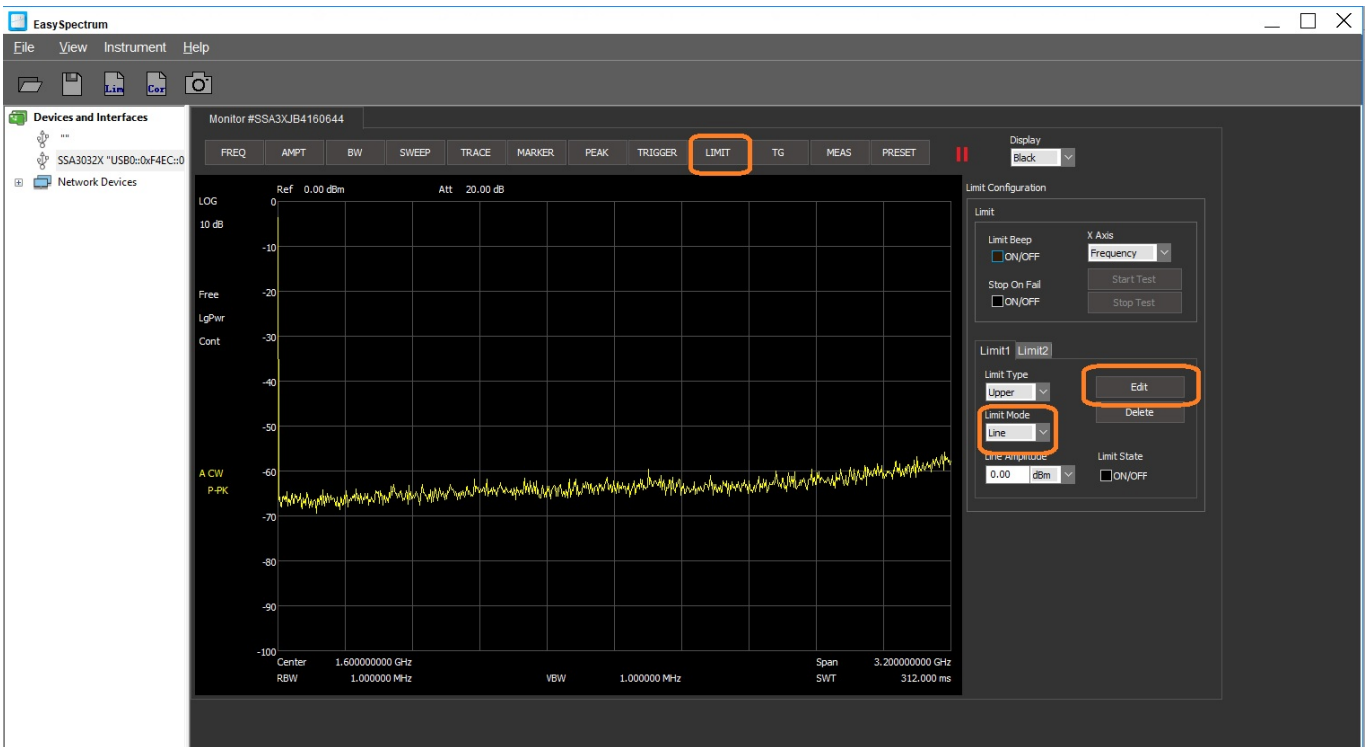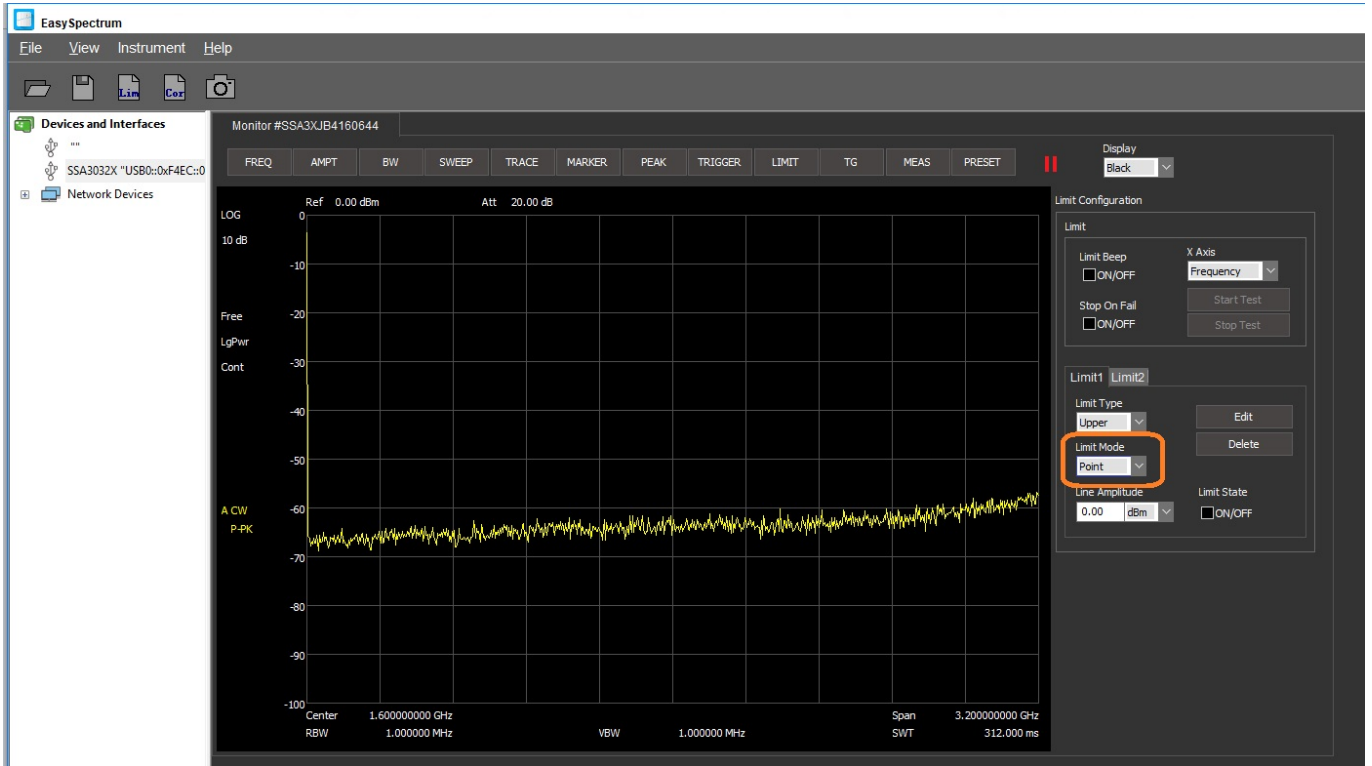


Now, change the units and configure the points.. pressing Add to add them to the list:

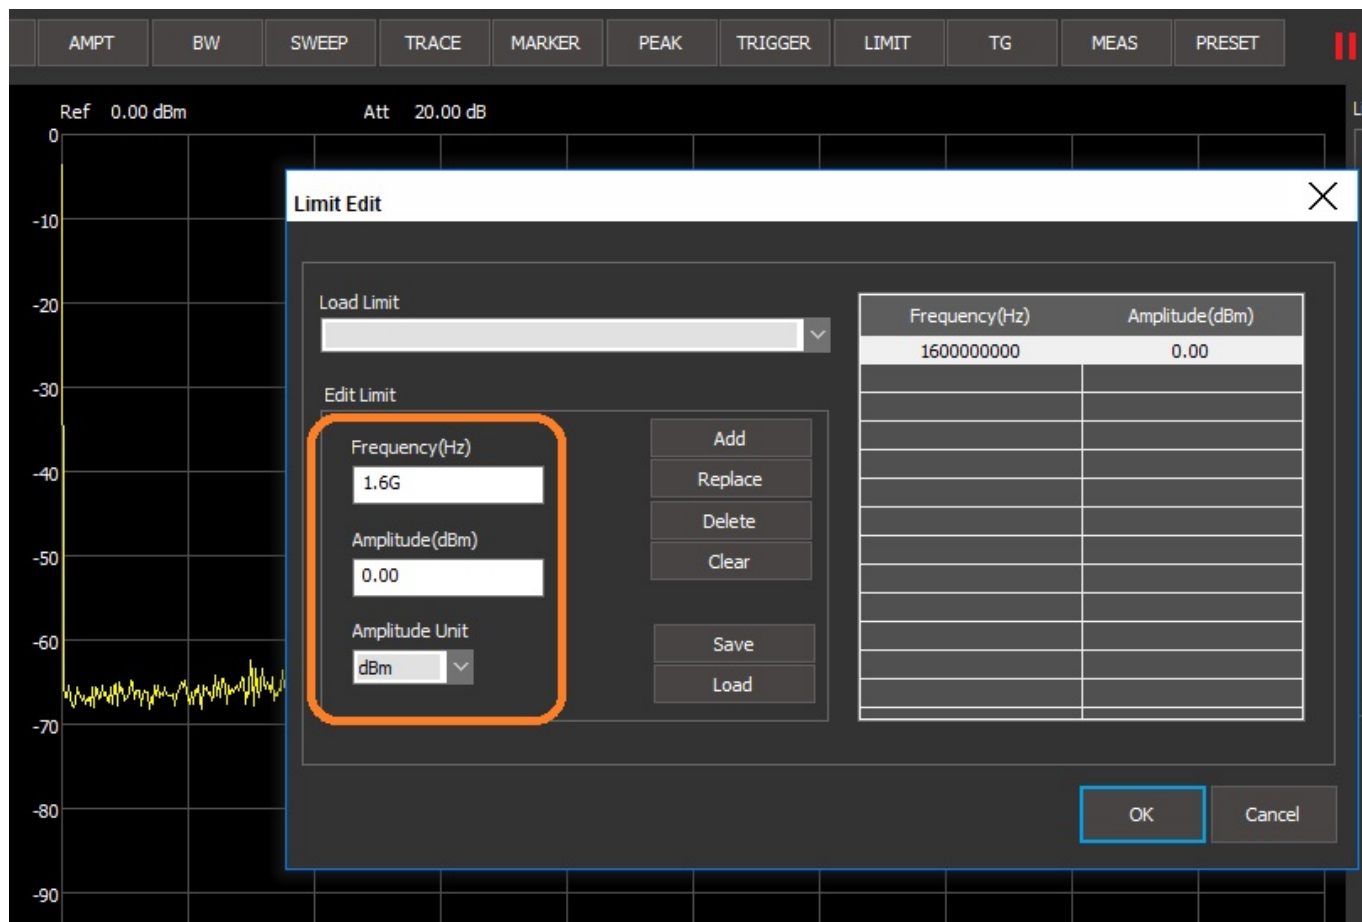

Now, save the file...

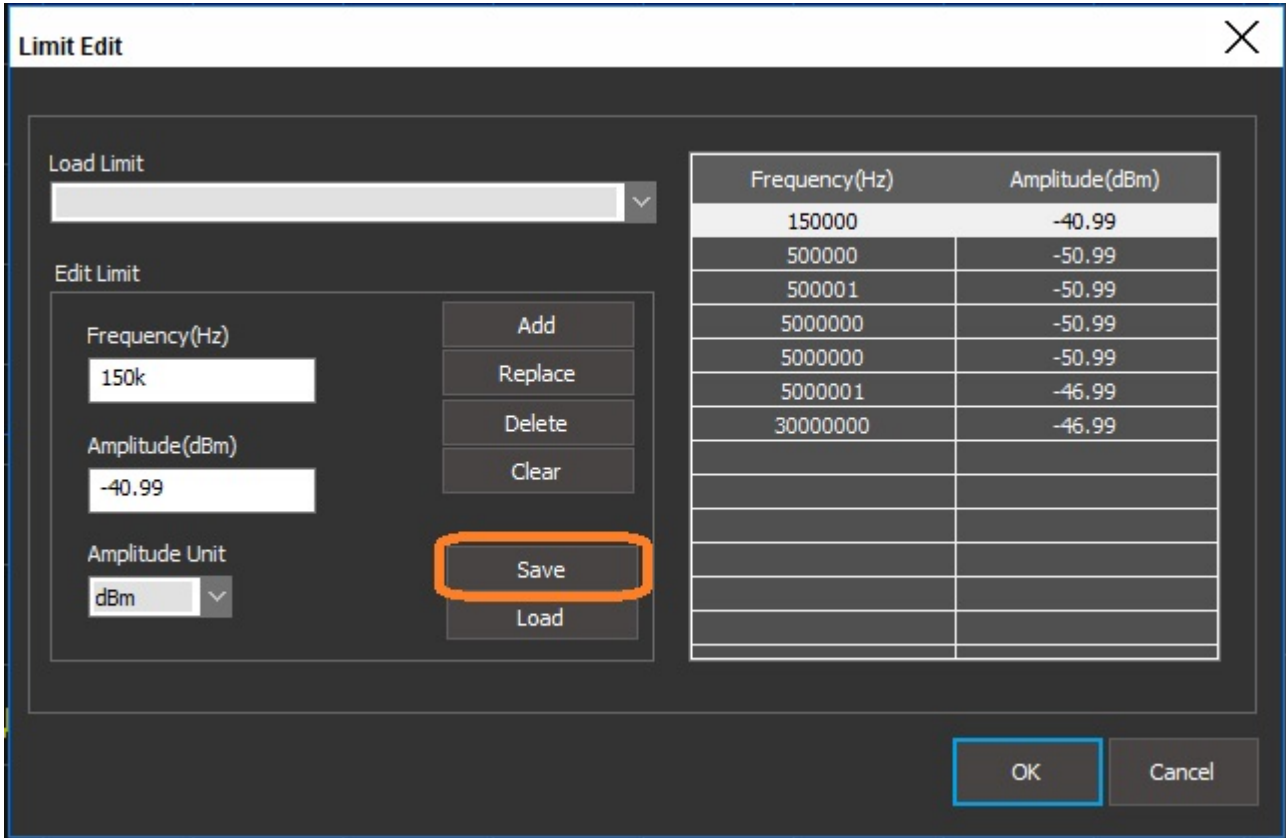

Now, you can activate the limit by selecting the "Limit State" to ON...

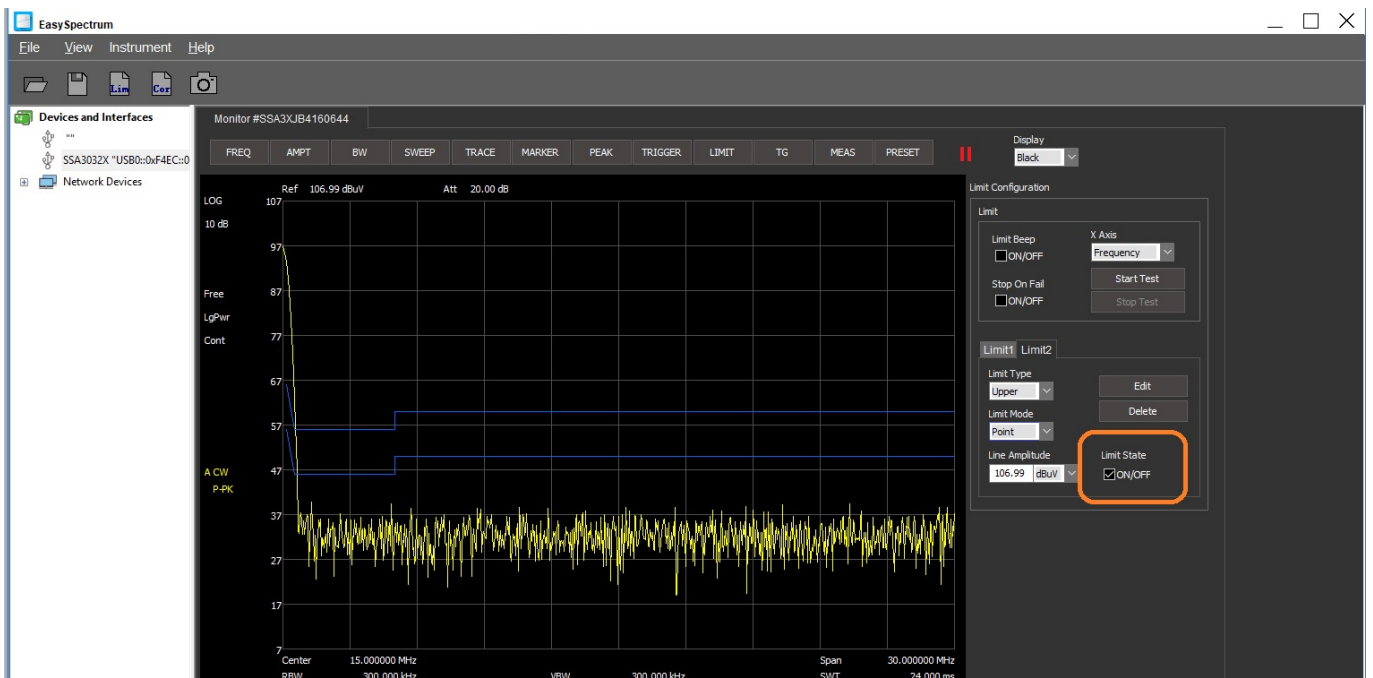

You can load a saved limit, edit, and save as a new file to build new limits.

Then load it for Limit2 and activate both lines.



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Liebigstrasse 2-20, Gebaeude 14,
22113 Hamburg Germany
Tel: +49(0)40-819-95946
Fax: +49(0)40-819-95947
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3661 5186
Fax: + 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens