

How to set up custom limits with SIGLENT EasySpectrum software

October 23, 2017

Solution


SIGLENT EasySpectrum software provides test sequence control for easing EMI pre-compliance testing. One of its most useful features is the creation and implementation of limit lines.

Here are some brief instructions on creating and recalling limit lines:

- Download EasySpectrum software from the product page of the SSA3000X spectrum analyzers from your local SIGLENT website


NOTE: EasySpectrum also requires National Instruments VISA (NI-VISA) runtime engine 3.5 or later. The VISA library is available on the National Instruments website.

- Connect the SSA3000X to the controlling computer via USB or Ethernet cable (for LAN connections)
- Start the software

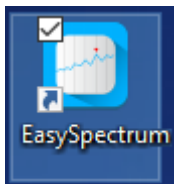


- A connection dialog box will appear and allow you to select from the connected devices. Select the device that you wish to connect to.

In this example, the available connections are to a USB device (USB0::XXX) and a LAN (TCPIP0::XXXX) device.

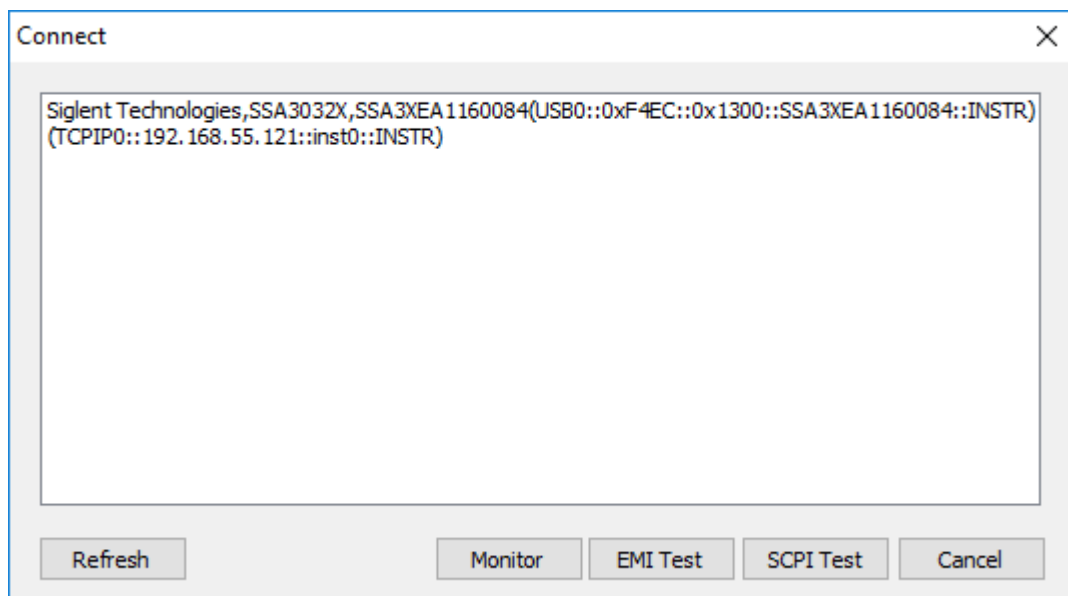

- Select the instrument you wish to connect to and then select EMI Test

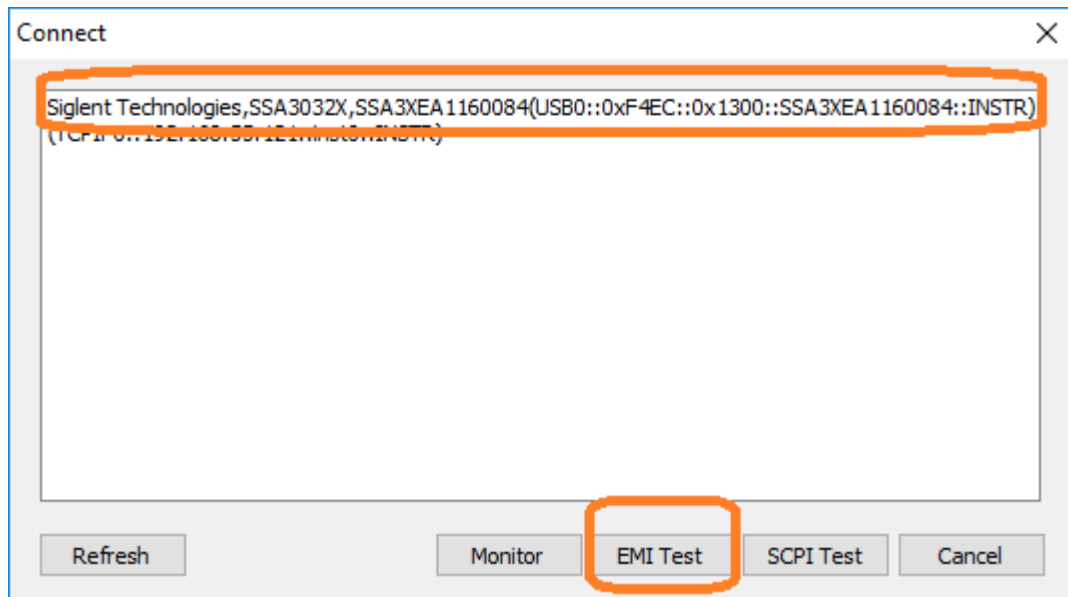

- Select Limit Edit
- Set Load Limit to User
- Set the frequency and amplitude for the first point in the limit line and press ad
- Continue to add each segment of the limit line until you have completed the total frequency span of the limit

NOTE: You can use the first letter as an exponent in the units. For example, if you wish to have the 1MHz frequency, simply add "1M" to the frequency test box as shown below:

Limit Edit

Load Limit

User

Edit Limit

Frequency(Hz)

1M

Amplitude(dBm)

-20

Amplitude Unit

dBm

Add

Replace

Delete

Clear

Save

Load


Frequency(Hz)	Amplitude(dBm)
1	-10
1000	-10
1000	-20
1000000	-20

Comment

OK

Cancel

- You can save as CSV by pressing Save and also load CSVs using the Load button
- Configure the pre-scan, peak search, and final scan settings and begin testing. The limit line may not be visible until you actually run a scan

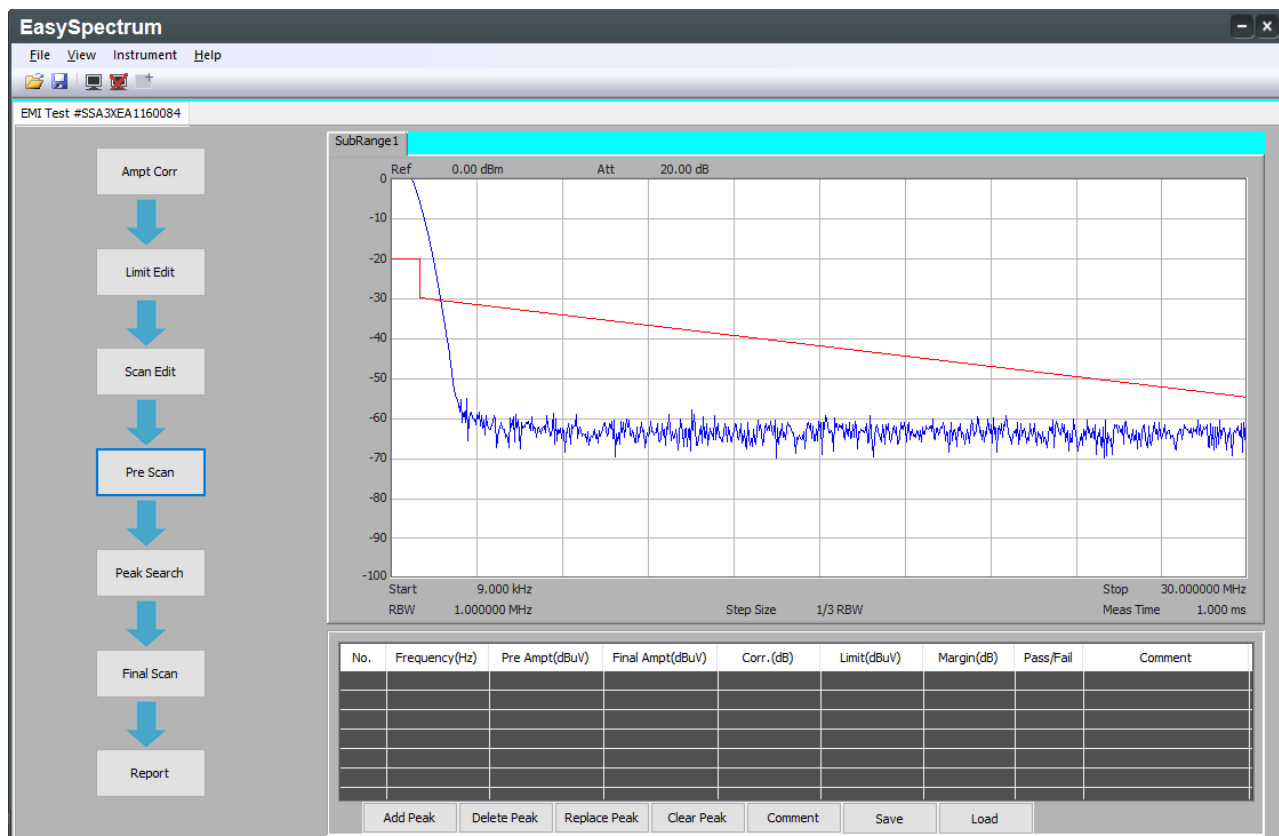



North American Headquarters

SIGLENT Technologies America, Inc
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES EUROPE GmbH
Staetzlinger Str. 70
86165 Augsburg, Germany
Tel: +49(0)-821-666 0 111 0
Fax: +49(0)-821-666 0 111 22
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3661 5186
Fax: + 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens